 
 
 
 


Commissioning LevNet RF™ for Use with Leviton Teacher Control Stations

Control for Today's Smart Classrooms with Leviton Classroom Lighting Control Systems

Commissioning the Receiver for General Mode (WST12-oXX or WSTo5-oXX) with Switch (WSSoS-DoX) and Occupancy Sensor (WSCxx-loW)

 
 
 
 
 
 
 
 
 
 
Do this	The receiver will	Notes
		
Master Switch #1  Press & Release top		
Master Switch #2  Press & Release top		
Teacher Control Switch Gen/AV  Press & Release top (GEN)		
Motion Detector  Press & Release Teach Button		
		
		
		
Teacher Control Switch Quiet/Off  Press & Release bottom (OFF)		
Teacher Control Switch Quiet/Off  Press & Release top (QUIET) 3 times		
Teacher Control Switch A/V  Press & Release top		
Teacher Control Switch A/V  Press & Release bottom		
WAIT 30 SECONDS 		

 


The light blinks 1 second on, 1 second off
 The light blinks twice, pauses, and repeats
 The light blinks three times, pauses, and repeats
 The light blinks four times, pauses, and repeats
 The light stays on for 3 seconds, resumes blinking

TECHNICAL BULLETIN

 
 
 
Commissioning the Receiver for A/V Mode (WSTLT-010 or WST01-001) with Switch (WSSoS-DoX) and Occupancy Sensor (WSCxx-l0W)

Do this	The receiver will	Notes
		
		
		
		
		
		
		
		
		
		
		
		



The light blinks 1 second on, 1 second off
 The light blinks twice, pauses, and repeats
 The light blinks three times, pauses, and repeats
 The light blinks four times, pauses, and repeats
 The light stays on for 3 seconds, resumes blinking

Commissioning the Receiver for A/V Mode (WSTLT-010 or WST01-001)
with Switch (WSSoS-DoX) and Occupancy Sensor (WSCxx-loW) - Continued

Do this	The receiver will	Notes
Teacher Control Switch Gen/AV  Press & Release top (GEN)	 	
WAIT 30 SECONDS 		
A/V Up/Down Switch  Adjust Light Level	  ?	
  1 sec 	 	
  3 sec 	 	
  3 sec 	 	
  3 sec 	 	
Teacher Control Switch Gen/AV  Press & Release bottom (A/V)	 	
WAIT 30 SECONDS 		

 
-  The light blinks 1 second on, 1 second off
-  The light blinks twice, pauses, and repeats
-  The light blinks three times, pauses, and repeats
-  The light blinks four times, pauses, and repeats
-  The light stays on for 3 seconds, resumes blinking

TECHNICAL BULLETIN



Commissioning the Receiver for Whiteboard Mode (WST12-oXX or WSTo5-oXX) with Switch (WSSoS-DoX) and Occupancy Sensor (WSCxx-loW)

Do this	The receiver will	Notes
Teacher Control Switch WB ON 		
Motion Detector 		
Teacher Control Switch Quiet/Off 		
Teacher Control Switch Quiet/Off 		
Master Switch #1 		
Master Switch #2 		
WAIT 30 SECONDS		



The light blinks 1 second on, 1 second off
 The light blinks twice, pauses, and repeats
 The light blinks three times, pauses, and repeats
 The light blinks four times, pauses, and repeats
 The light stays on for 3 seconds, resumes blinking

Leviton Manufacturing Co., Inc. Global Headquarters

201 N. Service Rd. Melville, NY 11747-3138 • Tech Line: 1-800-824-3005 • Fax: 1-800-832-9538

Leviton Manufacturing Co., Inc. Lighting & Energy Solutions

20497 SW Teton Avenue, Tualatin, OR 97062 • Tel: 1-800-736-6682 • Fax: 503-404-5594 • Tech Line (6:00AM-4:00PM P.S.T. Mon-Fri): 1-800-959-6004

Leviton Manufacturing of Canada, Ltd.

165 Hymus Boulevard, Pointe Claire, Quebec H9R 1E9 • Telephone: 1-800-469-7890 • FAX: 1-800-563-1853

Leviton S. de R.L. de C.V.

Lago Tana 43, Mexico DF, Mexico CP 11290 • Tel. (+52) 55-5082-1040 • FAX: (+52) 5386-1797 • www.leviton.com.mx

Visit our Website at: www.leviton.com/les

© 2012 Leviton Manufacturing Co., Inc. All rights reserved. Subject to change without notice.

G-8725/D12-tb