


FireLink FL-FK1-R Replacement Annunciator Installation Instructions



Remove and replace as follows:

1. Remove power from control panel.
2. Unplug the connector.
3. Unscrew the four (4) mounting screws at each corner (see arrows below).
4. Remove keypad from the front and replace with new **FL-FK1-R**.
5. Secure with four screws and plug in connector.
6. Restore power and check operation.

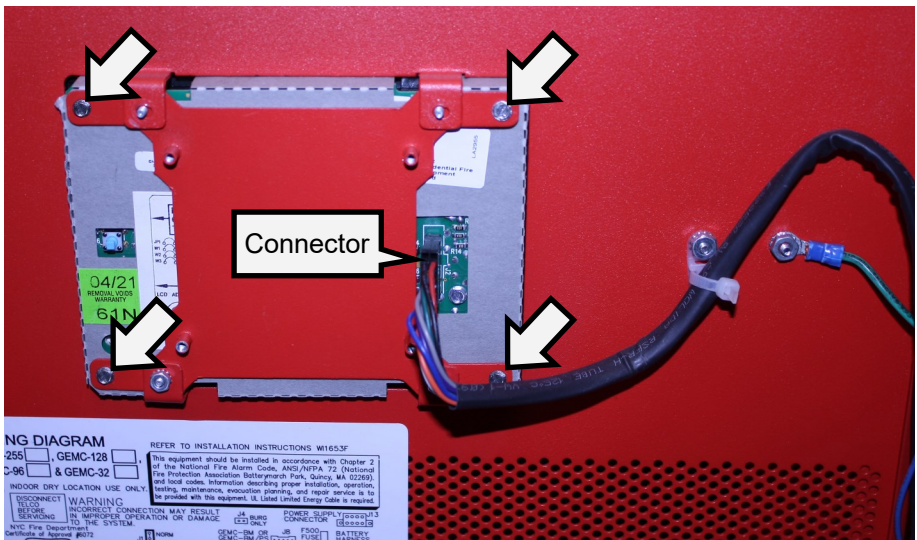

Napco Security Technologies, Inc.
333 Bayview Avenue, Amityville, New York 11701
(Note: Technical Service is for alarm professionals only)
Sales, Repairs & Technical Service (Toll Free): (800) 645-9445
Technical Service Direct Line (Toll Free): (800) 645-9440