
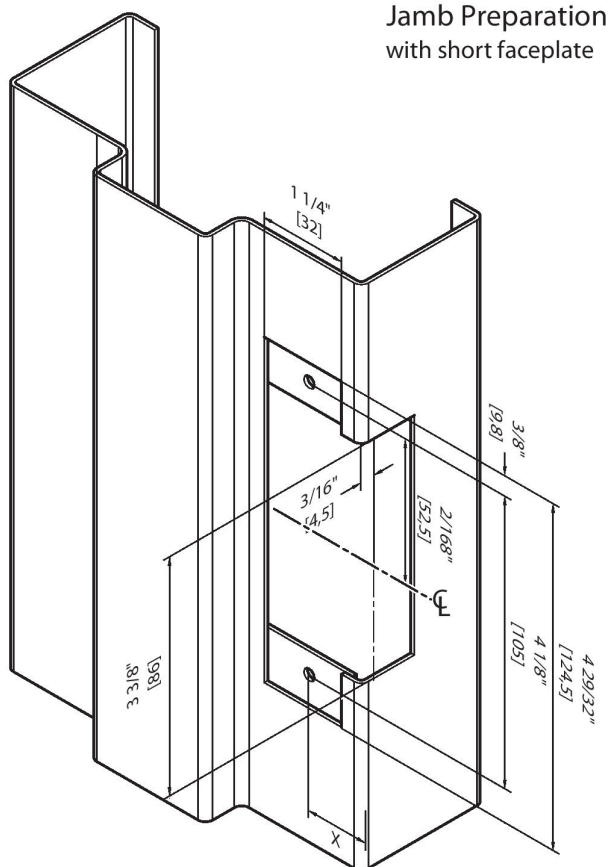


Note:
Pre load
feature only
functional with
fail secure
operation.

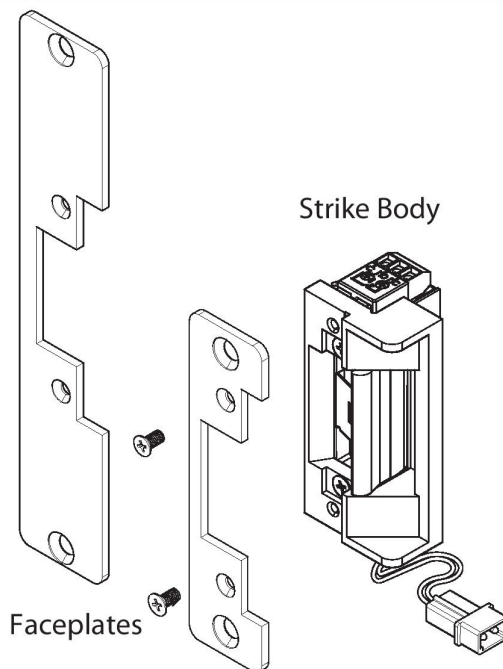

Dimensions

5/8" [17,8] 1-7/16" [36] 9/32" [7,5] 1 1/8" [28,2] 7/16" [11,25] 3 11/32" [85] 3 11/16" [93,75]

1 1/4" [31,5] 5/8" [15,6] 1 9/32" [3,2] 1 3/64" [26,4] 3/4" [19,25] 3/32" [2,5]


15 1/2" [38,2] 10 1/4" [26,5] 8 1/4" [21,1] 1 3/4" [44,66] 25/32" [21] 27/32" [17,1] 7/16" [13,24]

10 1/4" [26,5] 8 1/4" [21,1] 7/8" [22,2] 1 1/2" [38,2]

15 1/2" [38,2] 10 1/4" [26,5] 8 1/4" [21,1] 7/8" [22,2]

Note:
Measurements in [] are mm

Connection

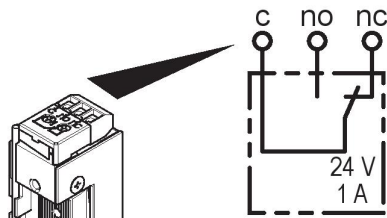

Latch Monitoring Output

Built-in latch monitoring feature wired to access control system.



Check voltage!



Power Input


12/24V AC/DC

Using a multimeter, **confirm that you have the correct output voltage at the power supply.**

Then, using a multimeter, **confirm that you have the correct input voltage at the strike.**

+/- doesn't matter!

Check Lock

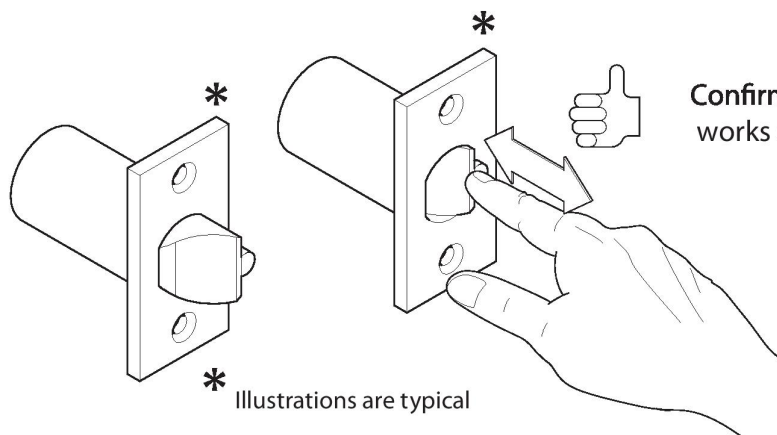

Confirm, that the latch works smoothly.

* Illustrations are typical