



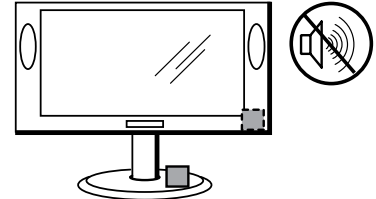

5870API Wireless Indoor Asset Protection Sensor

Quick Installation Guide


Step 1. Select Location

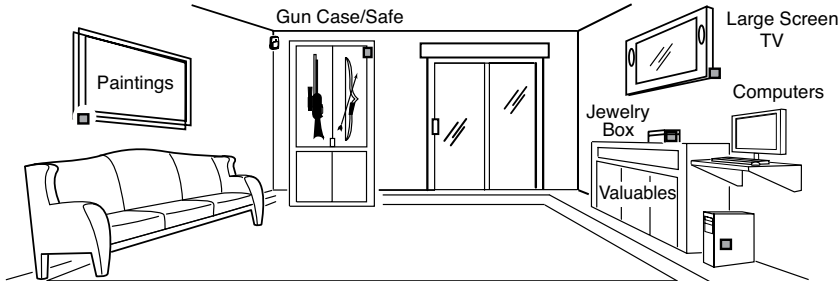


- Avoid sources of vibration (i.e. speakers, fans, motors)
- Choose a stable, clean, flat surface
- Mount in an inconspicuous area

Step 2. Select Operating Mode


! LOOP 1 is for High Security (Fast Trigger) applications and should ONLY be used if the asset will NOT be subject to external vibration. Loop 2 (Standard Security mode) should be used in most cases.

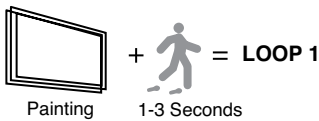


High Security (Fast Trigger) Mode (Loop 1)

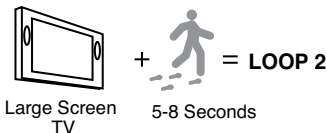

Standard Security Mode (Loop 2)

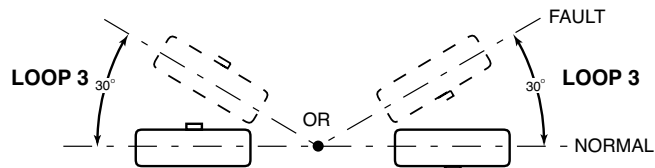


MOUNT HORIZONTALLY ONLY (LOOP 3 ONLY)

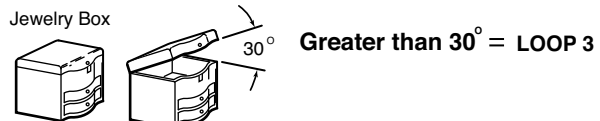


Tilt Mode (Loop 3)

Step 3. Program Device

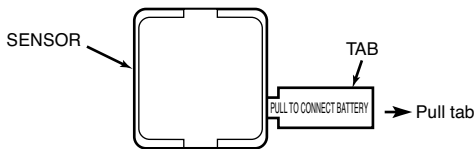


1. Pull tab to activate battery


- Enter Zone Number, Zone Type and Input Type at keypad
- Enroll Serial Number (press tamper switch)
- Enter Loop Number at keypad (use Loop 2 unless Fast Trigger or Tilt is required)

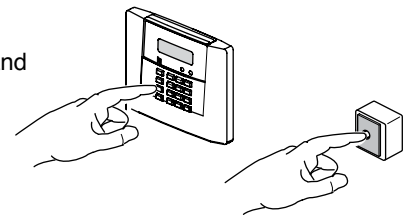


Step 4. Install Device

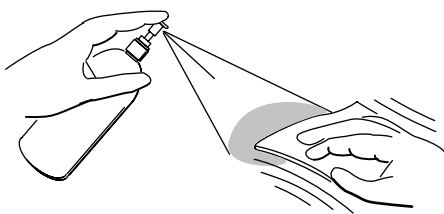


1. Clean mounting surface

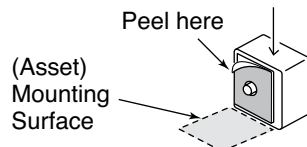

2. Peel tape backing before installing. Place onto asset.

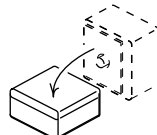

3. Rotate into position

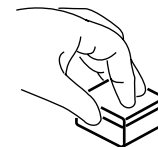

4. Press down firmly for five seconds.

Step 5. Test System

