
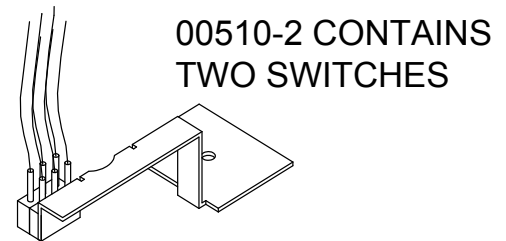


SDC Security Door Controls

801 Avenida Acaso, Camarillo, Ca. 93012 • (805) 494-0622 •
www.sdcsecurity.com • E-mail: service@sdsecurity.com

00510-2 INSTALLATION INSTRUCTIONS DUAL SWITCH KIT (VON DUPRIN 33, 99)

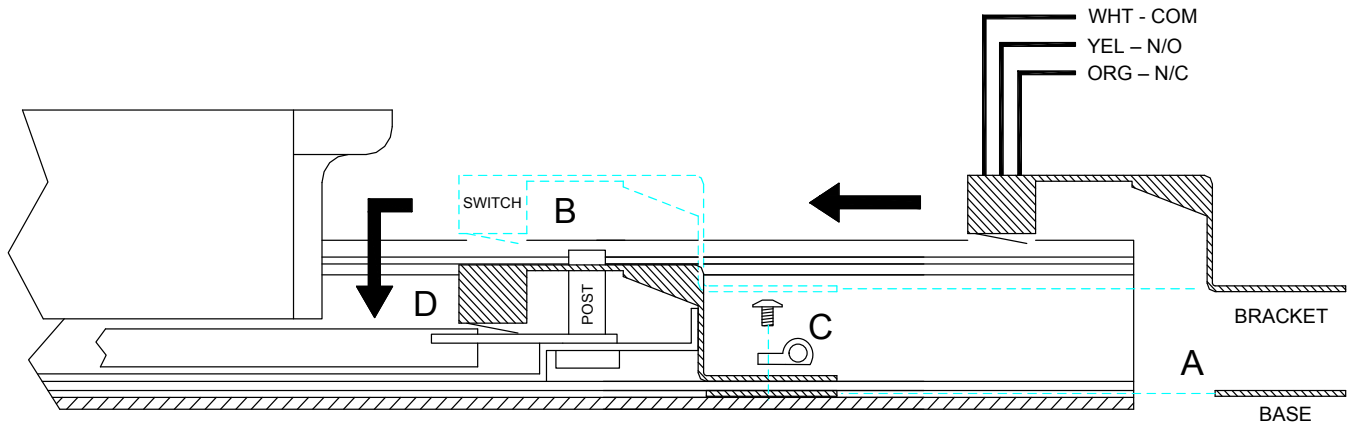

- (A) SLIDE BASE THROUGH SLOT AT BOTTOM OF BAR.
- (B) SLIDE BRACKET OVER DOGGING ASSEMBLY UNTIL SWITCH CLEARS POST.
- (C) DROP AND ALIGN BRACKET OVER BASE SECURING SWITCH ASSEMBLY WITH SCREW PROVIDED.
- (D) MOVE ASSEMBLY FORWARD UNTIL PROPER SWITCH ACTIVATION IS ACHIEVED AND TIGHTEN SCREW.

Applications

Remote Latch Status Monitoring:

Retracting the latch by depressing the push pad provides an output signal for local or remote visual and audible annunciation indicating forced entry or unauthorized egress.

Access Control REX: When connected to the Request-To-Exit input of a keypad, card or biometric Access Controller, depressing the pushpad and retracting the latch actuates the Latch Status contact, shunting the control access control alarm to permit authorized egress and/or releases the magnetic door lock for uninhibited egress.

Magnetic Lock Release: Where Access Controller with REX input is unavailable, the N/C contact of the switch is wired in series between the power supply and fail safe magnetic lock. Depressing the exit device pushpad retracts the latch, causing the contact to open, thereby releasing the magnetic lock for uninhibited egress.

Mantrap Logic: Provides N/O and N/C contacts required for 2 or more communicating doors for Interlock and Mantrap applications.