 





Wireless Classroom Audio System

AW330

Quick Guide

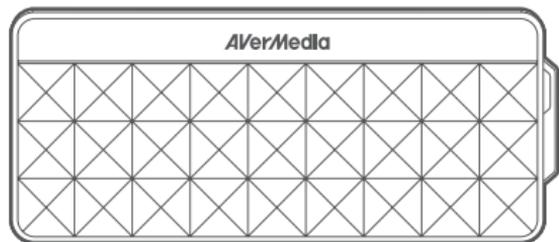

English
Deutsch
Español
Português do Brasil

Magyar
Русский
繁體中文
简体中文

Disclaimer

All the images in this documentation are examples only. The images may vary depending on the product and software version. Information presented in this documentation has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this documentation is subject to change without notice.

Copyright and Trademark Information

©2024 by AVerMedia Technologies, Inc. All rights reserved. No part of this publication, in whole or in part, may be reproduced, transmitted, transcribed, altered or translated into any language in any form by any means without the written permission of AVerMedia Technologies, Inc. Information and specification contained in this manual are subject to change without notice and do not represent a commitment on the part of AVerMedia.

For more information, please refer to www.avermedia.com. "AVerMedia" is a trademark or registered trademark of AVerMedia Technologies, Inc. The pictures contained in this manual are provided for reference purposes only.

Made in Taiwan (Except Accessories).

US Office

Address 754 Charcot Avenue, San Jose, CA 95131, United States
Website <http://www.avermedia.com/us>

Head Office EU (AVT Solutions GmbH)

Address Hanauer Landstrasse 291 B, 60314 Frankfurt Hessen, Germany

Headquarters

Address No.135, Jian 1st Rd., Zhonghe Dist., New Taipei City 23585, Taiwan
Website <http://www.avermedia.com>
Telephone +886-2-2226-3630

免責聲明

此文件所有的圖示僅供參考，圖示內容可能因產品與軟體版本不同而有所更動。本文內的所有資訊皆已經過詳細確認，但並無法保證完全準確無誤。本文件之內容如有修改，恕不另行通知。

版權聲明

©2024 圓剛科技版權所有、轉載必究。

本使用手冊內容受到著作權之保護並歸屬於本公司所有。非經本公司書面同意，不得以任何方式將本手冊之全部或一部進行重製、傳輸、抄寫、轉譯或翻譯成其他語言，或以任何型態呈現其內容。本公司保留變更或改善產品的權利，恕不另行通知。歡迎至官網 www.avermedia.com 取得本產品相關最新資訊。AVerMedia 為圓剛科技股份有限公司所擁有的商標或註冊商標。手冊所述產品及配件之示意圖僅供參考，實際外觀以產品出貨為準。

國際總部

地址 23585 新北市中和區建一路 135 號
網址 www.avermedia.com
支援 www.avermedia.com/support
電話 +886-2-2226-3630

歐洲辦事處 (AVT Solutions GmbH)

地址 Hanauer Landstrasse 291 B, 60314 Frankfurt Hessen, Germany

免责声明

此文件所有的图示仅供参考，图示内容可能因产品与软件版本不同而有所更动。本文内的所有资讯皆已经过详细确认，但并无法保证完全准确无误。本文件之内容如有修改，恕不另行通知。

版权声明

©2024 圆刚科技版权所有、转载必究。

本使用手册内容受到著作权之保护并归属于本公司所有。非经本公司书面同意，不得以任何方式将本手册之全部或一部进行重制、传输、抄写、转译或翻译成其他语言，或以任何形态呈现其内容。本公司保留变更或改善产品的权利，恕不另行通知。欢迎至官网 www.avermedia.com.cn 或 solutions.avermedia.com/zh-cn 取得本产品相关最新资讯。AVerMedia为圆刚科技股份有限公司所拥有的商标或注册商标。手册所述产品及配件之示意图仅供参考，实际外观以产品出货为准。

国际总部

地址 23585 新北市中和区建一路 135 号
网址 www.avermedia.com
支援 www.avermedia.com/support
电话 +886-2-2226-3630

中国子公司

地址 上海市陈行公路2388号2号楼903室
网址 www.avermedia.com.cn
电话 +86-21-5298-7985

欧洲办事处 (AVT Solutions GmbH)

地址 Hanauer Landstrasse 291 B, 60314 Frankfurt Hessen, Germany

Important Safety Instructions and Disclaimer

 **WARNING:** Failure to follow these safety instructions could result in fire, electric shock, other injury or damage to device or other property, and/or loss of life. AVerMedia is not responsible for damage or injury arising from failure to follow safety instructions relating to the product's use.

General Guidelines and Warning

- Read and follow these instructions.
- Do not use the device on uneven or unstable surfaces.
- Do not use this device in a wet environment or near water.
- Unplug the device before cleaning. Clean only with a dry cloth.
- Use in a well ventilated environment. Do not block any ventilation openings.
- Use the device in environments with ambient temperatures between 0°C (32°F) and 35°C (95°F).
- Use power sources within the specified voltage range.
- Do not place heavy objects on the device.
- Do not install near heat sources such as radiators or stoves.
- Do not defeat the safety purposes of the polarized or grounding-type plug.
- Protect the power cord from being walked on or pinched, particularly where the cord connects with plugs or adapters.
- Only use the attachments and accessories specified by the manufacturer.
- Unplug this device during lightning storms or when unused for prolonged time.
- Do not modify or disassemble the device in any way.
- Refer all servicing to qualified personnel.
- Do not dispose the device as general household waste. Dispose in accordance with local environmental laws.

General Battery Instructions

- Never short circuit the battery terminals.
- Store the batteries in a cool dry place.
- Keep the battery away from children.
- Keep the battery away from fire.

- Stop using or charging the battery immediately if the battery becomes or appears damaged, gives off an odor, becomes discolored or deformed, starts to balloon or swell, leaks.
- Never store or charge the battery inside your car or in extreme temperature. Extreme temperatures might ignite the battery and cause fire.
- Do not dispose of used batteries in domestic waste. Dispose of batteries at special collection points or return to point of sale if applies.

Lithium Polymer Battery

- Attempting to disassemble or modify the battery can cause an explosion or liquid leakage from the battery. If the rechargeable battery is incorrectly replaced, there is danger of an explosion.
- The battery contains a small amount of harmful substances. To avoid possible injury, replace it with a battery type recommended by AVerMedia.
- The battery's working temperature is between 0°C (32°F) and 35°C (95°F), be sure to operate the device within this range. Do not expose it to direct sunlight as it could cause overheating, rupture, or even fire.
- Even if the battery is fully charged and not in use, it will still discharge gradually over time. If you haven't used the device for a while, it is recommended to recharge it before use.
- Batteries are consumable supplies. Their power capacities degrade gradually after repeated charging. Therefore, even when you charge it fully every time, the usage time will still reduce and batteries will eventually die out.
- When the device is in use or charging, it is normal for it to get warm.
- Never charge the battery unattended. During the entire process of charging your battery, you must constantly observe and monitor the charging process so that you can quickly react to any problems that may occur and to be certain that the battery is being charged properly.
- The battery should be stored at room temperature, charged to approximately 30 to 50% of capacity at least once per year to prevent over-discharge.
- Do not discharge the battery at a rate exceeding the maximum continuous discharge current specified for it. Otherwise, the battery will overheat and result in battery deterioration, bursting, ballooning, or possibly cause a fire or explosion.

Limited Warranty

AVerMedia warrants that the Product is free from defects in material and/or workmanship under normal use.

AVerMedia does not warrant that the operation of the Product will be uninterrupted or error-free. The Limited Warranty does not cover:

- The warranty period has expired;
- Product that has (a) serial numbers or the warranty sticker that have been removed, tampered, damaged or altered, or (b) nonconforming.
- Product purchased from an unauthorized distributor;
- Product has been tested, altered, modified, repaired or serviced by someone other than AVerMedia (or its authorized service centers);
- Failure to adhere to user's manual.
- Product that are operated in combination with third party's software which may be obtained by user or provided by AVerMedia in the product packaging.
- Product that are operated in combination with third party's device(s)/equipment(s), or the damage is caused from computer viruses
- Damage caused by (a) misuse, abuse, neglect, improper use of the physical or operating environment (such as the exterior ruptures, moisture, exposure to temperature, high or low humidity, power overload, placement subject to extreme environments that include a lack of ventilation or stacking, throwing, soakage, etc.) or modification; (b) improper or unauthorized installation, wiring, repair, testing; (c) use of the Product outside AVerMedia published guidelines; (d) accident, fire, acts of God or force majeure such as natural disasters, environmental distress, or lightning; power surges; (e)improper maintenance or failure to use the information content in accordance with the Product.
- Other than the above, similar circumstances not attributable to AVerMedia.

Warranty Period

The term of the warranty begins from the date of purchase. Your dated sales receipt showing the date of purchase is the proof of purchase. The warranty period varies by product and is generally 1 or 2 years; consult your original AVerMedia product packaging or user information provided by AVerMedia and local in-country distributor at the time of purchase for the warranty term specific to your product ("Warranty Period").

How to Obtain Warranty Service – Contact Your Local In-Country Distributor

- To obtain warranty service, an original or copy of the sales receipt from the original retailer is required.
- A separate warranty may be provided by international distributors. This warranty is provided by the local in-country distributor and this distributor provides local service for your device. Distributor warranties are only valid in the area of intended distribution.
- When a Product or part is replaced, the replacement item becomes your property and the returned product or part becomes the property of AVerMedia or its distributor.

Usage of Personal Contact Information

If you obtain service under this warranty, you agree to and fully authorize AVerMedia or its distributor to store, use, and handle information related to the warranty service, as well as your personal contact information, including but not limited to your name, phone number, address, and email. AVerMedia or its distributor requires this information to perform the necessary service set forth by this warranty. For warranty service and outcome satisfaction, AVerMedia reserves the right to contact you in order to understand the problems that occur during usage of the product; the company may also notify you about any product recalls or safety issues. To achieve satisfactory results, you agree to fully license AVerMedia to transfer his/her customer information to the country or region of the original purchase. This allows AVerMedia to undertake the scope of product or parts maintenance of the warranty service. AVerMedia may also disclose this information under certain legal requirements.

How to Provide Warranty Service

Services may vary by geographic region, please contact AVerMedia or its distributor for a response regarding the appropriate services for your Product. The Warranty Service may be provided by the following types.

a. Customer Delivery Service

According to "Customer Delivery Service," the customer must pay for their own product to be delivered to a designated service center for repair or replacement, and all risks are borne by the customer. The customer may retrieve the product after the repair or replacement process has been completed. Should the customer fail to collect the

product, the company will handle the product as it sees fit without incurring any liability.

b. Mail-In Service

According to "Mail-In Service," customers will be required to pay for their own products to be mailed to a designated service center for repair or replacement, and all the risks are borne by the customer. After the product has been repaired or replaced, AVerMedia will send the product back to the customer at their own expense and bear all risks, except where otherwise specified by service dealers.

c. Customers' Two-Way Mail Service

According to "Customers' Two-Way Mail Service," customers will be required to pay for their own product to be delivered to a designated service center for repair or replacement, and all the risks are borne by the customer. After the product has been repaired or replaced, the product will be returned to the customer, for which all delivery and other risks are borne by the customer. If the customer fails to arrange for the return transport of the product, the company will handle the product as it sees fit without incurring any liability.

No On-Site Service

AVerMedia and its distributor do not provide on-site service, including but not limited to, installation, maintenance, instructing, troubleshooting problems, the usage of the product or the warranty service. In the event that calling, updating software, or other means fail to resolve the issue, AVerMedia and its distributor will arrange warranty service as specified under "Scope of Warranty Services (a)."

Limitation of Liability

AVerMedia accepts responsibility for the damage of loss of products only under the following circumstances: when the company has a product in store or when a product is being transported by the company.

If any information contained in the product (including confidential information, proprietary information, or personal information) is missing or revealed, AVerMedia or its service dealers are without responsibility.

Under any circumstances, if the solutions proposed under the warranty have not fulfilled its basic purpose, AVerMedia, its subsidiaries, suppliers, and dealers do not

assume any burden of liability: (a) loss, damage, or disclosure of client data; (b) special damages, incidental damages, punitive damages, or consequential damages, including but not limited to loss of profits, loss of business revenue, goodwill, or anticipated damage to balance loss, and even if the possibility has been raised, whether the claim is based on contract, warranty, negligence, strict liability, or other liability. Under the circumstances that AVerMedia, its subsidiaries, suppliers and distributors assumes responsibility for damages caused by any reason, the amount of its total liability shall not exceed the actual payable of direct damages, nor shall it exceed the amount paid by the customer for the product.

Prejudice to the foregoing restriction does not apply to personal injury or death caused by injury, nor does it apply to the compensation required by law for AVerMedia to assume with regards to real or tangible property.

Where the law does not exclude or limit incidental or consequential damages, the above limitations or exclusions may not apply to the customer.

Other Rights

This warranty provides the customer with specific legal rights. The customer may be subject to jurisdiction in accordance with the relevant laws in his or her district, but the customer is subject to the laws and regulations that govern the country or state where the product was originally purchased. This warranty does not affect any legal rights, including the limitations or exclusions laid out by this contract; instead, the control of the consumer goods sold is governed by the relevant laws or regulations born of consumer rights.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Battery Warranty

Your battery is guaranteed to be free of manufacturer's defects at the time of purchase. Batteries that have been mishandled, abused, or damaged by the user are not covered under warranty. AVerMedia Technologies, Inc. is not liable for any loss or damage, whether direct or indirect, incidental or consequential, or from any special situation, arising from the use, misuse, or abuse of this product.

重要安全說明及免責聲明

 **警告：**未遵守這些安全說明可能會導致起火、觸電、設備或其他財產損壞、或生命損失。圓剛科技不負責因未能遵守產品的使用安全說明造成的傷害或損失。

一般準則和警告

- 仔細閱讀並遵循以下說明。
- 請勿將本產品安裝於不平穩的表面。
- 請勿在潮濕或靠近水的地方使用本產品。
- 清潔前請拔除電源。僅使用乾布清潔。
- 請於通風的環境使用本產品。請勿堵住通風口。
- 請在環境溫度介於 0°C (32°F) 至 35°C (95°F) 的範圍內使用本產品。
- 請使用額定電壓範圍內的電源。
- 請勿放置重物於本產品上。
- 請勿安裝於熱源附近如暖器或火爐旁。
- 請勿破壞極性或接地插頭的安全防護設計。
- 請保護電源線，勿使其被踩踏或碾壓，特別是與插頭或變壓器的連接處。
- 僅使用製造商指定的配件及零件。
- 打雷或長時間不使用時請拔除電源。
- 請勿以任何方式改造或拆解本產品。
- 如需維修請洽合格維修人員。
- 請勿當作家庭垃圾任意丟棄。請遵從當地環境法規妥善處理。

一般電池的使用方法

- 請勿使電池短路。
- 請將電池置放於陰涼、乾燥的地方。
- 請將電池置於兒童無法觸及之處。
- 請將電池遠離火源。
- 當電池有損壞，發出異味，變色、變形、或開始膨脹、漏電池液，請立即停止使用或停止充電。
- 請勿在車內或高溫度環境儲存電池或充電。溫度過高可能點燃電池，導致火災。
- 請勿將電池丟入以掩埋方式處理的垃圾中。處理電池時，請遵照當地的法令或法規。

鋰聚合物電池

- 試圖拆解或改裝電池可能會導致電池爆炸或液體洩漏。如果充電電池更換不當，可能有爆炸的危險。
- 該電池中含有少量的有害物質。為了避免可能的傷害，請使用圖剛建議之電池類型進行更換。
- 電池的工作溫度在 0°C (32°F) 至 35°C (95°F) 下，務必在該範圍內操作設備。不要將其暴露在直射陽光下，因它可能會導致過熱、破裂，甚至引起火災。
- 即使電池完全充飽電且不在使用，它仍會隨時間逐漸放電。如果已有一段時間沒有使用設備，建議在使用前重新充電。
- 電池是消耗品。他們的儲電能力會在反覆充電下逐漸降低。因此，即使每次充滿電，使用時間仍會降低，電池將最終死亡。
- 設備在使用或充電中發熱屬於正常現象。
- 請勿在無人觀察時進行充電。在充電時，須有人不斷地注意和監測充電過程，以確保電池有在適當的充電或在發生任何問題時可快速應對。
- 電池應在室溫下保存，每年至少一次充電到大約30至50%的容量，以防止過度放電。
- 請勿放電超過電池的最大持續放電電流，否則電池會過熱並導致電池老化、破裂、或可能引起火災或爆炸。

產品有限保固責任

保固期限內，本公司保證本產品在正常使用的情况下，無材料及製造上之缺陷。

本公司不保證本產品不會發生錯誤或出現任何運作中斷的情形。但本有限保固不包含下列狀況：

- 產品已過保固期
- 產品序號 (貼紙) 之變更、塗改、汗損無法辨識或移除
- 非透過當地授權經銷商售出的產品
- 未經本公司同意，自行變更本產品之設計或委由第三人進行維修因而造成之產品異常。
- 未依照使用手冊進行使用導致產品之瑕疵、異常或損壞
- 使用第三人 之軟體、裝置或電腦病毒導致產品之瑕疵、異常或損壞
- 不正確的安裝或是連接其他外部裝置導致產品之瑕疵、異常或損害
- 測試不當、操作不當、濫用、誤用、意外、疏忽、改建、腐蝕、或無可預防的未知行為所造成產品的損害如產品之損害係受天災 (水災、火災、地震、雷擊等) 及人禍 (如暴動、戰爭、核子災害)、人為之故意破壞 (如敲打、破裂、外觀損傷破裂、受潮、暴露於溫、溼度過高/過低、電源超過負荷、放置位置密閉不通風/堆疊及其他類似之極端環境、摔機、液體浸滲.....等)、自然耗損、環境因素、電源失調、人為疏忽或其他非正常使用致者
- 隨附於產品中或後續使用者自行取得的任何軟體程式
- 其他非本公司因素所造成

保固期間

產品的保固期限，除本公司另有指定外，將自您取得之銷售收據或發票上所示之購買原始日期起計算，享有本公司保固服務。保固期隨產品不同而有差別，請查看你的產品外包裝或是詢問您購買產品之店家，以便進一步了解本產品的保固期間。

提出保固服務需求時請注意下列事項

- 發票上需有店家有效之註冊名稱或店章且售出之產品品名必需能清楚識別為該產品方可受理
- 保固服務之申請應向原購買之店家或經銷商申請，若向它國或地區購買之產品，該保固服務仍請至原購買之店家或經銷商申請
- 當產品或零組件被更換時，使用者取得替換商品的所有權，而被替換之商品所有權將歸屬於 AVerMedia 或其經銷商

為檢測或維修的需要，維修單位有權逕行將本產品回復原廠設定，如果因此而導致送修資料的遺失，本公司、維修單位均不負任何責任。且本保固服務並不包含協助您將儲存於本產品內的資料予以備份或恢復，請您於送修前自行備份或妥善保存產品內之之所有程式與資料。本公司維修單位有權移除非保固範圍內的所有功能、零件、配件、改裝物或附加物。

使用者連絡資料之使用

如您依據本保固取得服務，即表示您同意且已充分授權本公司儲存、使用及處理保固服務之相關資訊，以及您的聯絡資訊，包括姓名、電話號碼、地址及電子郵件地址。本公司得以使用此資訊執行本保固所提供之服務。本公司可能會聯絡您以便瞭解因使用產品所發生的問題、對保固服務過程及結果的滿意度，或告知產品回收或安全問題的相關資訊。為達成這些目標，您需完全授權本公司將您之資訊轉移至您購買本產品所在之國家或地區，提供予圓剛科技股份有限公司的當地維修單位或是維修代理機構，以進行保固服務。本公司亦可能於法律要求下揭露此資訊。

保固服務類型

提供的服務可能因地理區域而異。若您自當地店家購得產品，可連絡本公司或其經銷商，確認產品所適用的服務回應方式。本公司提供的保固服務方式包括：

a. 客戶運送服務

依據「客戶運送服務」，客戶需自行付費將產品送到指定的服務中心進行修繕或更換，且所有風險由客戶自行承擔。於產品經修繕或更換後，客戶即可取回。若客戶未能取回該產品，本公司得以自認合適的方式處理產品，且無需負任何賠償責任

b. 郵寄服務

依據「郵寄服務」，客戶需自行付費將產品郵寄至指定之服務中心進行修繕或更換，且所有風險由客戶自行承擔。於產品經修繕或更換後，本公司會自費將產品送還給客戶並承擔所有風險，惟服務經銷商另有規定者不在此限

c. 客戶雙程郵寄服務

依據「客戶雙程郵寄服務」，客戶需自行付費將產品送到指定之服務中心進行修繕或更換，且所有風險由客戶自行承擔。於產品經修繕或更換後，即可將產品送還給客戶，運送費用及風險均由客戶自行承擔。若客戶未能安排取回產品之運送事宜，本公司得以自認合適的方式處理該產品，且無需負任何賠償責任

不提供到府服務

AVerMedia 及其經銷商皆無提供到府維修、安裝、教學、排解使用問題的服務，如產品有使用上的問題或需進行修繕或更換，AVerMedia 及其服務經銷商會嘗試透過電話、電子郵件或遠端輔助方式來診斷及解決問題，若透過電話、套用軟體更新...等等皆無法解決問題，本公司及其經銷商將依據「產品保固服務類型」- a 點來進行排程維修。

責任限制

本公司僅就產品於下列情況所遭受之毀損或滅失負責：本公司持有產品時，或本公司所負擔之運送途中。

對於產品內之任何資料 (包括機密資訊、專有資訊或個人資訊) 遺失或遭人揭露，本公司或服務經銷商皆無需負任何責任。

於任何情況下，即使本保固所規定之救濟方式未能達成其基本目的者，本公司、其子公司、供應商、及經銷商均無需就下列任何情況負擔賠償責任：(a) 客戶端資料遺失、損毀或遭人揭露；(b) 特殊損害、附帶損害、懲罰性損害、間接損害或衍生性損害，包括但不限於利潤損失、營業收益損失、商譽損害或預期結餘損失，且縱使已被告知有此可能性者，無論索賠係基於契約、保固、疏忽、無過失責任或其他責任者，亦然。任何情況下，本公司、其子公司、供應商及經銷商就任何原因所造成之損害，其應付之賠償責任總額不得超過實際直接損害的金額，亦不得超過您購買產品所支付的金額。

前述限制不適用於人身傷害或死亡所致損害，亦不適用於本公司需依法賠償的不動產或有形財產的損害。倘若法律規定不得排除或限制附帶或衍生性損害，則上述限制或排除條款可能不適用於客戶。

其他權利

本保固賦予您具體特定之法律權利。您依所屬管轄地區的相關法律，可能享有其它權利，但僅適用於原購買國家或地區的產品。本保固將不影響任何法定權利，包括不得以契約免除或限制之，由管制消費類商品銷售的相關法律或規定所生的消費者權利。

電池保固責任

您的電池是保證在購買的時候無製造缺陷。用戶處理不當，濫用或損壞的電池不在保修範圍之內。AVerMedia 不承擔任何無論是直接或間接、附帶或相應、或從使用、誤用或濫用本產品而導致的任何特殊情況的損害責任。

重要安全说明及免责声明

 **警告：**未遵守这些安全说明可能会导致起火、触电、设备或其他财产损失、或生命损失。圆刚科技不负责因未能遵守产品的使用安全说明造成的伤害或损失。

一般准则和警告

- 仔细阅读并遵循以下说明。
- 请勿将本产品安装于不平稳的表面。
- 请勿在潮湿或靠近水的地方使用本产品。
- 清洁前请拔除电源。仅使用干布清洁。
- 请于通风的环境使用本产品。请勿堵住通风口。
- 请在环境温度介于 0°C (32°F) 至 35°C (95°F) 的范围内使用本产品。
- 请使用额定电压范围内的电源。
- 请勿放置重物于本产品上。
- 请勿安装于热源附近如暖器或火炉旁。
- 请勿破坏极性或接地插头的安全防护设计。
- 请保护电源线，勿使其被踩踏或碾压，特别是与插头或变压器的连接处。
- 仅使用制造商指定的配件及零件。
- 打雷或长时间不使用时请拔除电源。
- 请勿以任何方式改造或拆解本产品。
- 如需维修请洽合格维修人员。
- 请勿当作家庭垃圾任意丢弃。请遵从当地环境法规妥善处理。

一般电池的使用方法

- 请勿使电池短路。
- 请将电池置放于阴凉、干燥的地方。
- 请将电池置于儿童无法触及之处。
- 请将电池远离火源。
- 当电池有损坏，发出异味，变色、变形、或开始膨胀、漏电池液，请立即停止使用或停止充电。

- 请勿在车内或高温环境储存电池或充电。温度过高可能点燃电池，导致火灾。
- 请勿将电池丢入以掩埋方式处理的垃圾中。处理电池时，请遵照当地的法令或法规。

锂聚合物电池

- 试图拆解或改装电池可能会导致电池爆炸或液体泄漏。如果充电电池更换不当，可能有爆炸的危险。
- 该电池中含有少量的有害物质。为了避免可能的伤害，请使用圆刚建议之电池类型进行更换。
- 电池的工作温度在 0°C (32°F) 至 35°C (95°F) 下，务必在该范围内操作设备。不要将其暴露在直射阳光下，因它可能会导致过热、破裂，甚至引起火灾。
- 即使电池完全充满电且不在使用，它仍会随时间逐渐放电。如果已有一段时间没有使用设备，建议在使用前重新充电。
- 电池是消耗品。他们的储电能力会在反覆充电下逐渐降低。因此，即使每次充满电，使用时间仍会降低，电池将最终死亡。
- 设备在使用或充电中发热属于正常现象。
- 请勿在无人观察时进行充电。在充电时，须有人不断地注意和监测充电过程，以确保电池有在适当的充电或在发生任何问题时可快速应对。
- 电池应在室温下保存，每年至少一次充电到大约30至50%的容量，以防止过度放电。
- 请勿放电超过电池的最大持续放电电流，否则电池会过热并导致电池老化、破裂、或可能引起火灾或爆炸。

产品有限保固责任

保固期限内，本公司保证本产品在日常使用的情况下，无材料及制造上之缺陷。

本公司不保证本产品不会发生错误或出现任何运作中断的情形。但本有限保固不包含下列状况：

- 产品已过保固期
- 产品序号(贴纸)之变更、涂改、污损无法辨识或移除
- 非透过当地授权经销商售出的产品
- 未经本公司同意，自行变更本产品之设计或委由第三人进行维修因而造成之产品异常。
- 未依照使用手册进行使用导致产品之瑕疵、异常或损坏
- 使用第三人之软体、装置或电脑病毒导致产品之瑕疵、异常或损坏
- 不正确的安装或是连接其他外部装置导致产品之瑕疵、异常或损害
- 测试不当、操作不当、滥用、误用、意外、疏忽、改建、腐蚀、或无可预防的未知行为所造成产品的损害如产品之损害系受天灾(水灾、火灾、地震、雷击等)及人祸(如暴动、战争、核子灾害)、人为之故意破坏(如敲打、破裂、外观损伤破裂、受潮、暴露于温、湿度过高/过低、电源超过负荷、放置位置密闭不通风/堆叠及其他类似之极端环境、摔机、液体浸渗...等)、自然耗损、环境因素、电源失调、人为疏忽或其他非正常使用致者
- 随附于产品中或后续使用者自行取得的任何软体程式
- 其他非本公司因素所造成

保固期间

产品的保固期限，除本公司另有指定外，将自您取得之销售收据或发票上所示之购买原始日期起计算，享有本公司保固服务。保固期随产品不同而有差别，请查看你的产品外包装或是询问您购买产品之店家，以便进一步了解本产品的保固期间。

提出保固服务需求时请注意下列事项

- 发票上需有店家有效之注册名称或店章且售出之产品品名必需能清楚识别为该产品信息方可受理
- 保固服务之申请应向原购买之店家或经销商申请，若向它国或地区购买之产品，该保固服务仍请至原购买之店家或经销商申请
- 当产品或零组件被更换时，使用者取得替换商品的所有权，而被替换之商品所有权将归属于AVerMedia 或其经销商

为检测或维修的需要，维修单位有权将本产品回复原厂设定，如果因此而导致送修资料的遗失，本公司、维修单位均不负任何责任。且本保固服务并不包含协助您将储存于本产品内的资料予以备份或恢复，请您于送修前自行备份或妥善保存产品内之的所有程式与资料。本公司维修单位有权移除非保固范围内的所有功能、零件、配件、改装物或附加物。

使用者连络资料之使用

如您依据本保固取得服务，即表示您同意且已充分授权本公司储存、使用及处理保固服务之相关资讯，以及您的联络资讯，包括姓名、电话号码、地址及电子邮件地址。本公司得以使用此资讯执行本保固所提供之服务。本公司可能会联络您以便了解因使用产品所发生的问题、对保固服务过程及结果的满意度，或告知产品回收或安全问题的相关资讯。为达成这些目标，您需完全授权本公司将您之资讯转移至您购买本产品所在之国家或地区，提供予圆刚科技股份有限公司的当地维修单位或是维修代理机构，以进行保固服务。本公司亦可能于法律要求下揭露此资讯。

保固服务类型

提供的服务可能因地理区域而异。若您自当地店家购得产品，可连络本公司或其经销商，确认产品所适用的服务回应方式。本公司提供的保固服务方式包括：

a. 客户运送服务

依据「客户运送服务」，客户需自行付费将产品送到指定的服务中心进行修缮或更换，且所有风险由客户自行承担。于产品经修缮或更换后，客户即可取回。若客户未能取回该产品，本公司得以自认合适的方式处理产品，且无需负任何赔偿责任

b. 邮寄服务

依据「邮寄服务」，客户需自行付费将产品邮寄至指定之服务中心进行修缮或更换，且所有风险由客户自行承担。于产品经修缮或更换后，本公司会自费将产品送还给客户并承担所有风险，惟服务经销商另有规定者不在此限

c. 客户双程邮寄服务

依据「客户双程邮寄服务」，客户需自行付费将产品送到指定之服务中心进行修缮或更换，且所有风险由客户自行承担。于产品经修缮或更换后，即可将产品送还给客户，运送费用及风险均由客户自行承担。若客户未能安排取回产品之运送事宜，本公司得以自认合适的方式处理该产品，且无需负任何赔偿责任

不提供到府服务

AVerMedia 及其经销商皆无提供到府维修、安装、教学、排解使用问题的服务，如产品有使用上的问题或需进行修缮或更换，AVerMedia 及其服务经销商会尝试透过电话、电子邮件或远端辅助方式来诊断及解决问题，若透过电话、套用软件更新...等等皆无法解决问题，本公司及其经销商将依据「产品保固服务类型」- a 点来进行排程维修。

责任限制

本公司仅就产品于下列情况所遭受之毁损或灭失负责：本公司持有产品时，或本公司所负担之运送途中。

对于产品内之任何资料(包括机密资讯、专有资讯或个人资讯) 遗失或遭人揭露，本公司或服务经销商皆无需负任何责任。

于任何情况下，即使本保固所规定之救济方式未能达成其基本目的者，本公司、其子公司、供应商、及经销商均无需就下列任何情况负担赔偿责任：(a) 客户端资料遗失、损毁或遭人揭露；(b) 特殊损害、附带损害、惩罚性损害、间接损害或衍生性损害，包括但不限于利润损失、营业收入损失、商誉损害或预期结余损失，且纵使已被告知有此种可能性者，无论索赔系基于契约、保固、疏忽、无过失责任或其他责任者，亦然。任何情况下，本公司、其子公司、供应商及经销商就任何原因所造成之损害，其应付之赔偿责任总额不得超过实际直接损害的金额，亦不得超过您购买产品所支付的金额。

前述限制不适用于人身伤害或死亡所致损害，亦不适用于本公司需依法赔偿的不动产或有形财产的损害。倘若法律规定不得排除或限制附带或衍生性损害，则上述限制或排除条款可能不适用于客户。

 
其他权利

本保固赋予您具体特定之法律权利。您依所属管辖地区的相关法律，可能享有其它权利，但仅适用于原购买国家或地区的产品。本保固将不影响任何法定权利，包括不得以契约免除或限制之，由管制消费类商品销售的相关法律或规定所生的消费者权利。


电池保固责任

您的电池是保证在购买的时候无制造缺陷。用户处理不当，滥用或损坏的电池不在保修范围之内。AVerMedia 不承担任何无论是直接或间接、附带或相应、或从使用、误用或滥用本产品而导致的任何特殊情况的损害责任。

These are what you'll find in the box:




Microphone
(AW315T)

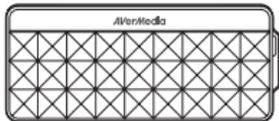

Speaker
(AW330S)



 Quick Guide



AC Power Adapter



USB Power Cable



3.5 mm Audio Cable



Lanyard




Buckle




Headset Mic

Parts and Ports

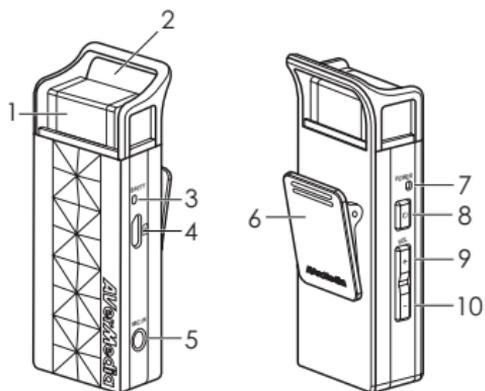


Microphone

- 1 Microphone
- 2 Lanyard Hole
- 3 Battery LED
- 4 USB Power Port
- 5 Mic Input
- 6 Clip
- 7 Power LED
- 8 Power Button
- 9 Volume Up Button
- 10 Volume Down Button

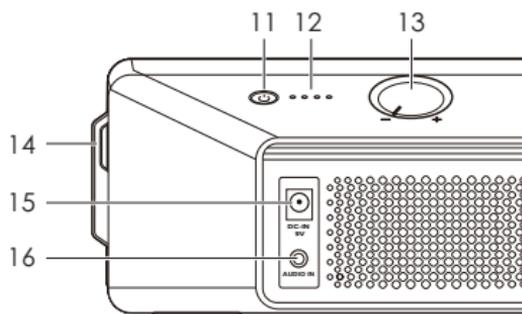

Speaker (Back)


- 11 Power Button (LED)
- 12 Battery LEDs
- 13 Volume Dial

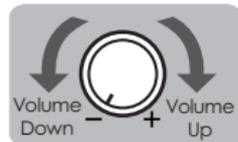

- 14 Strap Hole
- 15 DC IN (9V \pm 2A)
- 16 AUDIO IN

Charging

Note: Fully charge your microphone and speaker before first use as they may not come fully charged.

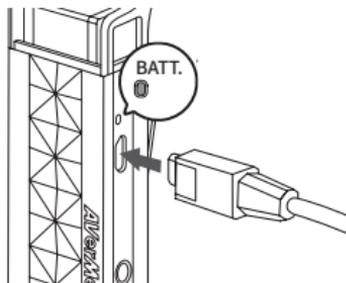


Microphone Battery LED (BATT.)

Flashing Red: Critical

Flashing Orange: Low

Flashing Red > Orange > Green: Charging

Solid Green: Fully Charged

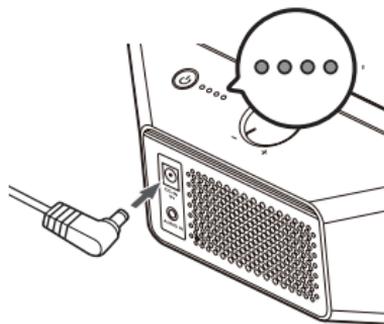

Speaker Battery LEDs

☼ ○ ○ ○ ○ Flashing Red: Critical


● ○ ○ ○ Solid Green: Low

● ● ☼ ○ Flashing Green: Charging

● ● ● ● Solid Green: Fully Charged


Preparation

Thread the lanyard through the buckle. Then attach the buckle to the microphone.

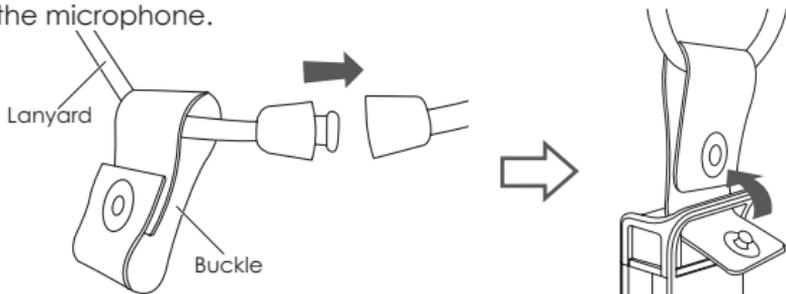

Wearing


You can clip the microphone to your clothing or wear it with the lanyard. The microphone is most effective when worn within 6 inches (15 cm) from your mouth.

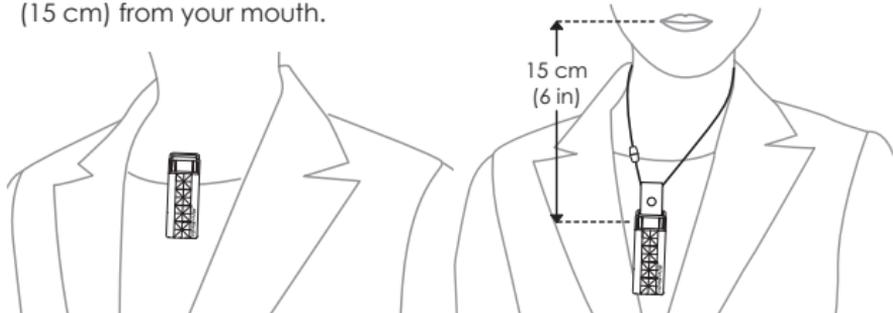


Paketinhalt

Lieferumfang in der Schachtel:

 DE




Mikrofon
(AW315T)

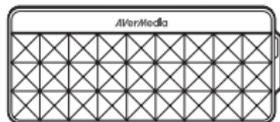

Lautsprecher
(AW330S)



 Schnellstartanleitung



Netzadapter



USB-Stromkabel



3,5 mm Audiokabel



Umhängeband




Schleufe




Microphone pour
casque d'écoute

Teile und Anschlüsse

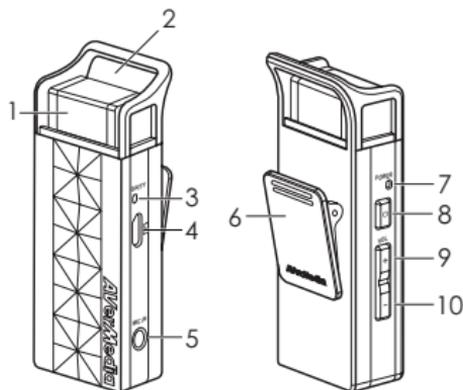


Mikrofon

- 1 Mikrofon
- 2 Umhängeband-Öffnung
- 3 Batterie-LED
- 4 USB-Stromanschluss
- 5 Mikrofoneingang
- 6 Clip
- 7 Netz-LED
- 8 Ein-/Aussschalter
- 9 Lautstärketaste +
- 10 Lautstärketaste -

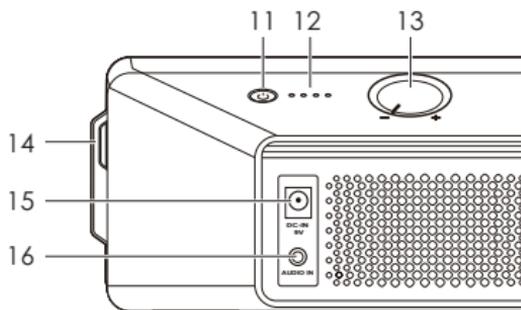

Lautsprecher (Rückseite)

- 11 Ein-/Aussschalter (LED)
- 12 Akku-LEDs
- 13 Lautstärkereglern

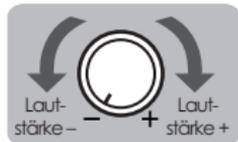


- 14 Trageöse
- 15 DC-Eingang (9V::2A)
- 16 Audio-Eingang

Laden

DE

Hinweis: Bitte laden Sie Mikrofon und Lautsprecher vor der ersten Verwendung vollständig, da sie bei Lieferung evtl. nicht voll geladen sind.

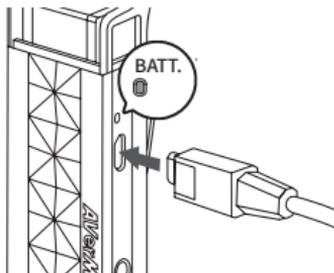


Akku-LED Mikrofon (BATT.)

Rot blinkend: kritisch

Orange blinkend: niedrig

Blinken Rot > Orange > Grün: laden

Grün dauerhaft: voll geladen

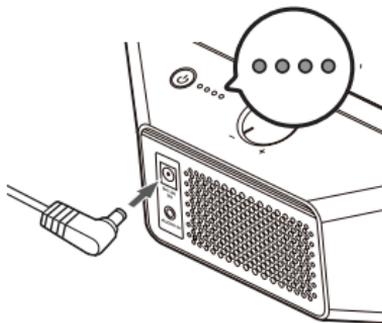

Akku-LEDs Lautsprecher



Rot blinkend: kritisch



Grün dauerhaft: niedrig




Grün blinkend: laden



Grün dauerhaft: voll geladen


Vorbereitung

Fädeln Sie die Kordel durch die Schlaufe, und befestigen Sie dann die Schlaufe am Mikrofon.

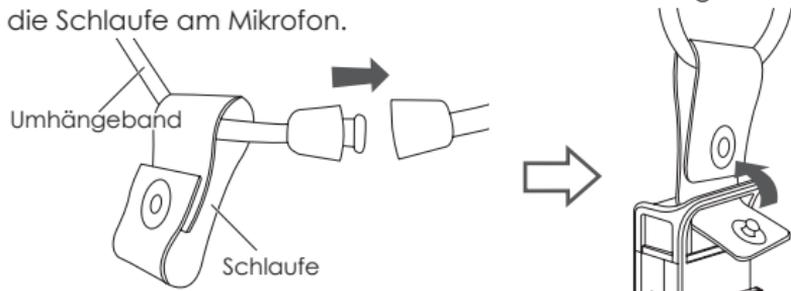


Tragen des Mikrofons

Sie können das Mikrofon an Ihre Kleidung anklipsen oder mit der Kordel um den Hals hängen. Die beste Wirkung erzielen Sie jedoch, wenn es maximal 15 cm von Ihrem Mund entfernt ist.

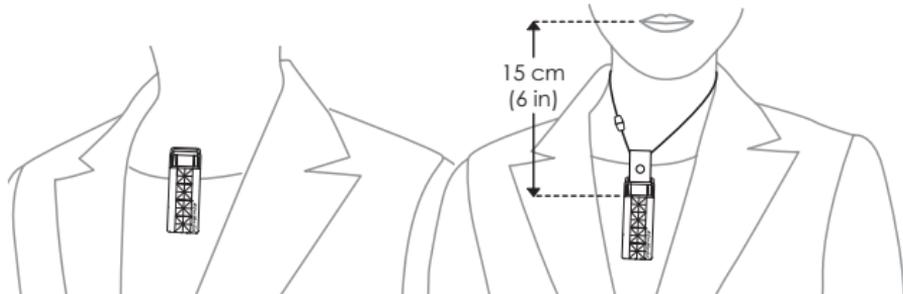


Contenido

 Contenido de la caja:




Micrófono
(AW315T)

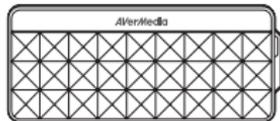

Altavoz
(AW330S)



 Guía Rápida



Adaptador de
corriente



Cable USB



Cable Audio de 3.5 mm



Correa




Fiador




Micrófono con
auriculares

Partes y Puertos

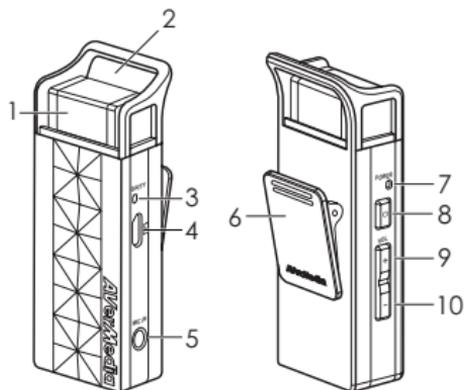


Micrófono

- 1 Micrófono
- 2 Soporte Correa
- 3 LED Batería
- 4 Entrada USB
- 5 Entrada de micrófono
- 6 Clip
- 7 LED encendido
- 8 Botón Encendido
- 9 Botón para subir el volumen
- 10 Botón para bajar el volumen

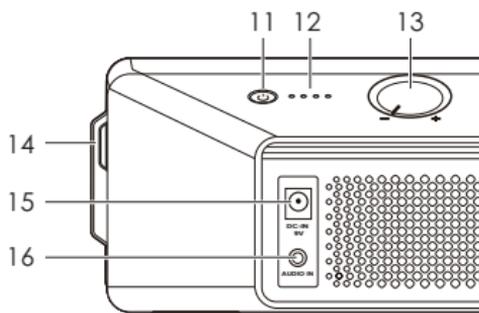

Altavoz (parte posterior)

- 11 Botón Encendido (LED)
- 12 LED de batería
- 13 Botón de volumen

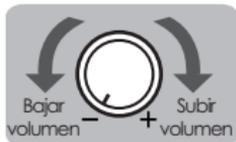


- 14 Orificio para la correa
- 15 Entrada DC (9V $\ddot{=}$ 2A)
- 16 Entrada de audio

Cargando

Nota: antes de usar el micrófono y el altavoz por primera vez, cárguelos completamente, ya que podrían no estar totalmente cargados.

ES

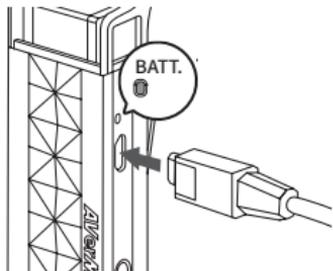


LED de batería del micrófono (BATT.)

Rojo intermitente: muy baja

Naranja intermitente: baja

Rojo > Naranja > Verde intermitente: cargando

Verde fijo: carga completada

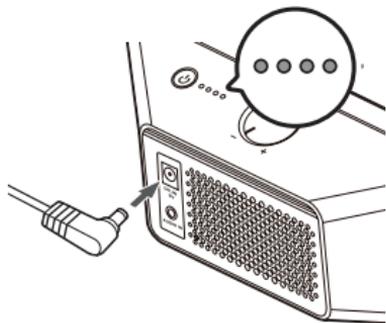

LED de batería del altavoz

☼ ○ ○ ○ Rojo intermitente: muy baja


● ○ ○ ○ Verde fijo: baja

● ● ☼ ○ Verde intermitente:
cargando

● ● ● ● Verde fijo: carga completada


Preparación

Pase la correa por el fiador y, a continuación, sujete el micrófono con el fiador.

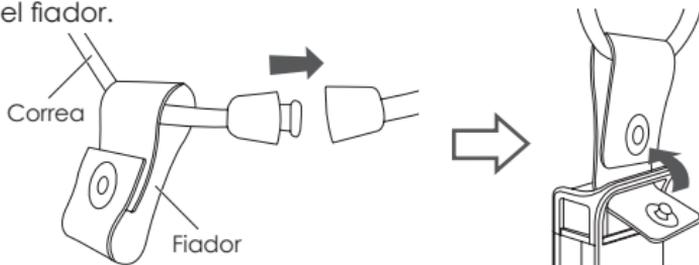


Vistiendo

Puede sujetar el micrófono en la ropa o llevarlo colgado de la correa. Para un funcionamiento óptimo, mantenga una distancia de 15 cm (6 pulgadas) entre el micrófono y la boca.

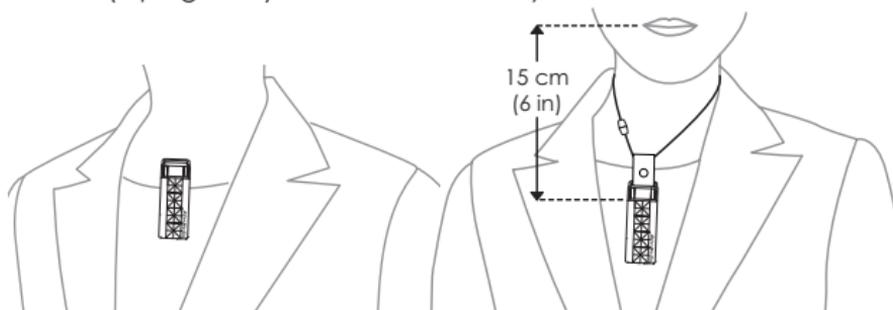


Dentro da Caixa

 Aqui está o que você vai encontrar dentro da caixa:



Microfone
(AW315T)

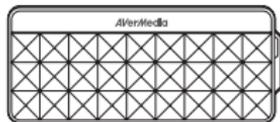


Speaker/Auto-Falantes
(AW330S)



Guia Rápido

 PB



Adaptador de
corrente



Cabo USB de Energia




Cabo de Áudio de
3.5 para 6.3 mm



Cordão de
Segurança




Fivela de Fecho

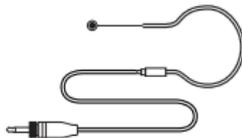


Microfone de
auscultador

Partes e Portas

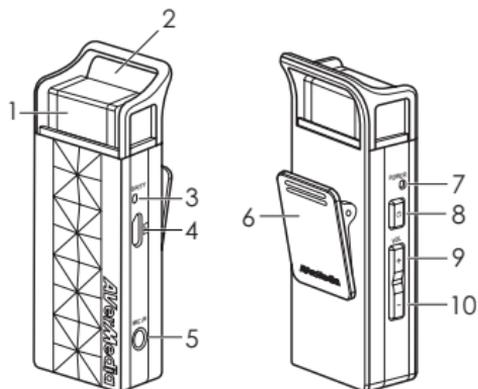


Microfone

- 1 Microfone
- 2 Espaço Para Cordão de Segurança
- 3 LED de Bateria
- 4 Porta de Energia USB
- 5 Entrada de Microfone
- 6 Clip
- 7 LED de Energia
- 8 Botão de Ligar
- 9 Controle de Volume +
- 10 Controle de Volume -

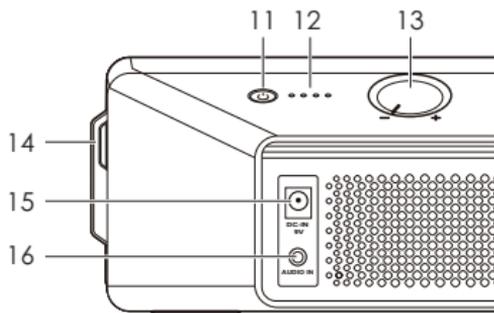

Speaker/Auto-Falante (Traseiro)


- 11 Botão de Ligar (LED)
- 12 LED de Bateria
- 13 Controle de Volume

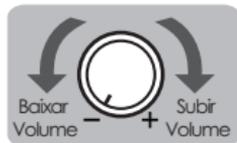

- 14 Buraco Para Alça de Segurança
- 15 Entrada de Alimentação (9V::2A)
- 16 Entrada de Áudio

Carregando

Nota: Carregue totalmente seu Microfone e Speaker (Alto-Falante) antes de usar, já que eles podem não ter vindo totalmente carregados

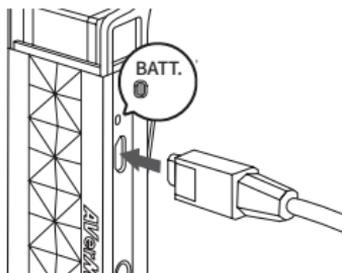


LED de Bateria do Microfone (BATT.)

Piscante Vermelho: Nível Crítico

Laranja intermitente: Nível Baixo

Piscante Vermelho > Laranja > Verde:
Carregando

Verde Contínuo:
Totalmente Carregado

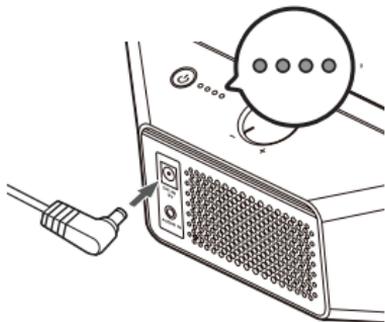

Leds de Bateria do Speaker (Auto-Falante)

☼ ○ ○ ○ Piscante Vermelho: Nível Crítico


● ○ ○ ○ Verde Contínuo: Nível Baixo

● ● ☼ ○ Verde Piscante: Carregando

● ● ● ● Verde Contínuo:
Totalmente Carregado


Preparando

Passo o cordão de segurança pela fivela de fecho. Então afivela ao microfone.

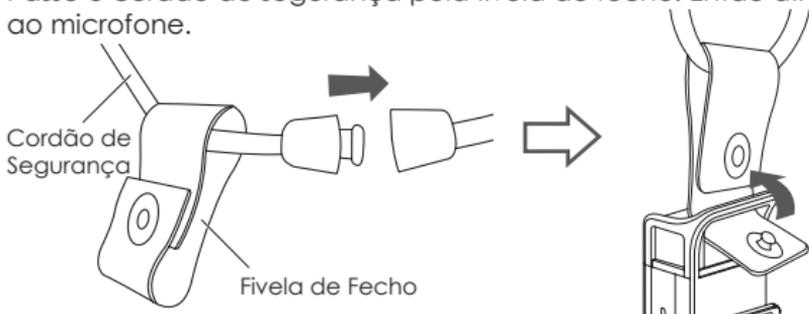


Vestindo: Usado

Você pode prender o microfone à sua roupa ou usá-lo com a correia de segurança. O microfone é mais eficaz quando usado à 15 cm (6 polegadas) de sua boca.

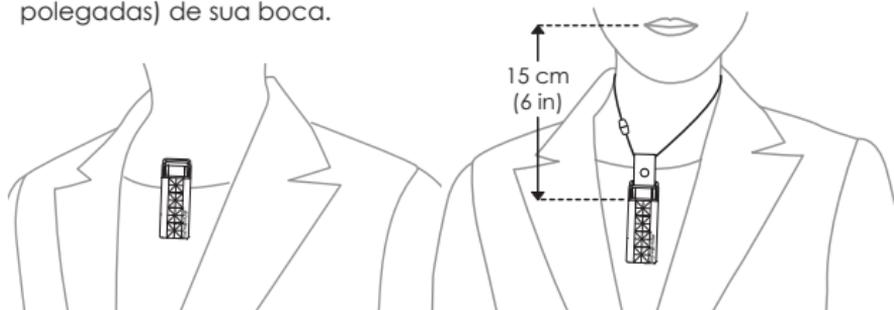


Doboz Tartalma

 Ezeket találja a dobozban:




Mikrofon
(AW315T)

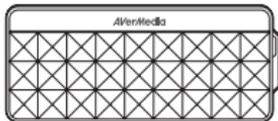

Hangszóró
(AW330S)



 Útmutató



Elektromos Adapter



USB kábel



3,5 mm audió
átalakító kábel



Nyakpánt




Csat




Fejhallgató mikrofon

Részek és Csatlakozások

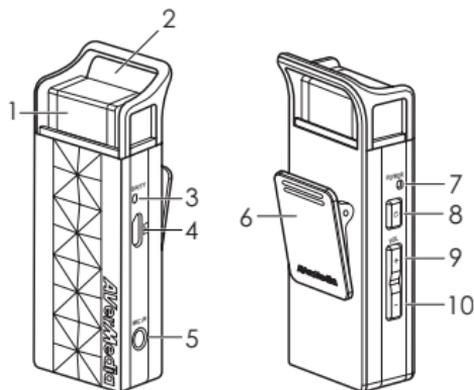


Mikrofon

- 1 Mikrofon
- 2 Nyakpánt lyuk
- 3 Akku LED
- 4 USB töltő aljzat
- 5 Mikrofon bemenet
- 6 Csipesz
- 7 Üzemi LED
- 8 Bekapcsoló gomb
- 9 Hangerő Fel gomb
- 10 Hangerő Le gomb

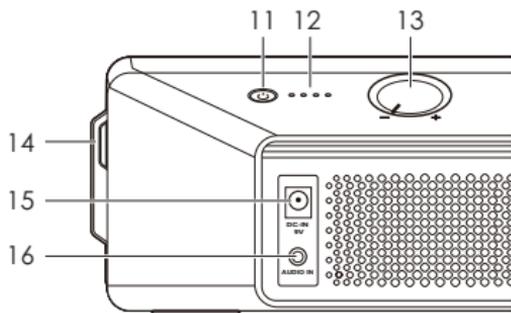

Hangszóró (hátdal)


- 11 Bekapcsoló gomb (LED)
- 12 Akkumulátor LED
- 13 Hangerő szabályzó

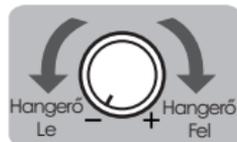

- 14 Pánt lyuk
- 15 Töltő bemenet (9V=2A)
- 16 Audió bemenet

Töltés

Megjegyzés: Első használat előtt töltsse fel teljesen a mikrofont és a hangszórót, előfordulhat, hogy nem teljesen feltöltve érkeznek.

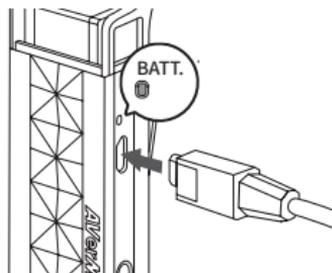


Mikrofon töltöttség LED (BATT.)

Villogó piros: Kritikus töltöttség

Villogó narancssárga: Alacsony tölt

Villogó piros > Narancs > Zöld: Töltés

Folyamatos zöld: Feltöltve

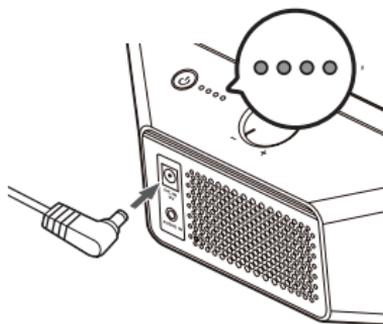

Hangszóró töltöttség LED

☀️ ○ ○ ○ Villogó piros: Kritikus töltöttség

● ○ ○ ○ Folyamatos zöld: Alacsony tölt


● ● ☀️ ○ Villogó zöld: Töltés

● ● ● ● Folyamatos zöld: Feltöltve

HU


Beüzemelés

Fűzze át a nyakpánt a csaton. Ezután csatlakoztassa a csatot a mikrofonhoz.

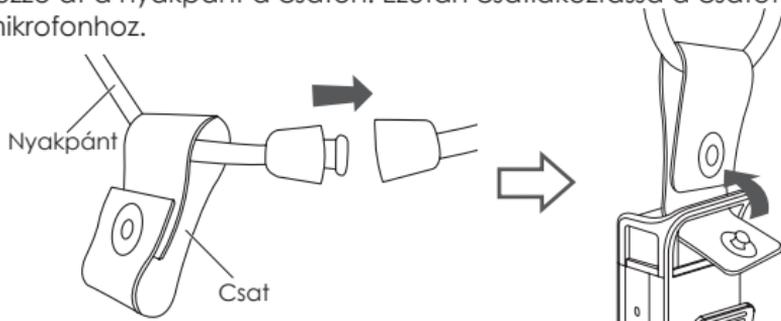


Hogyan Hordjuk

A mikrofont csíptetheti a ruhájára vagy hordhatja a nyakpánton is. A mikrofon akkor a leghatékonyabb, ha 15 cm távolságra van a szájától.

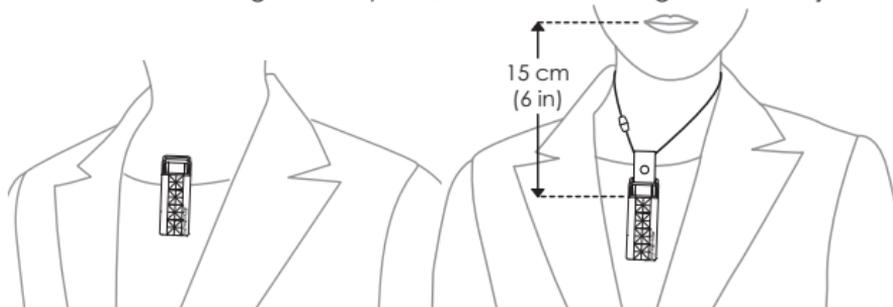


Комплект поставки

 Внутри коробки находятся:




Микрофон
(AW315T)

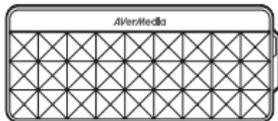

Колонка
(AW330S)



 Краткое
руководство



Блок питания



USB кабель питания



Аудио кабель с 3,5 мм



Ремешок на шею




Хомутик



Микрофон для
гарнитуры


RU

Описание элементов и портов

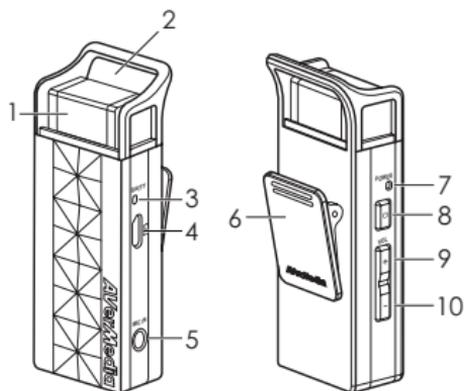

Микрофон

- 1 Микрофон
- 2 Крепление для ремешка
- 3 Светодиодный индикатор батареи
- 4 Разъем USB питания
- 5 Микрофонный вход
- 6 Клипса
- 7 Светодиодный индикатор питания
- 8 Кнопка питания
- 9 Кнопка увеличения громкости
- 10 Кнопка уменьшения громкости

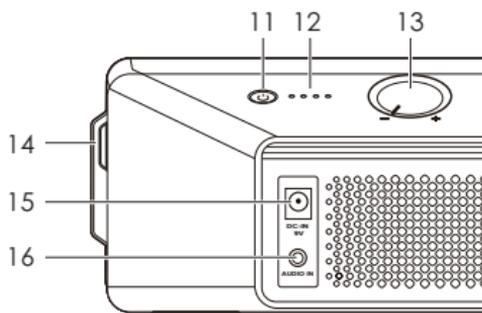

Колонка (задняя сторона)


- 11 Кнопка питания (Диод)
- 12 Диоды батареи
- 13 Регулятор громкости



- 14 Отверстие для ремешка
- 15 Разъем адаптера питания (9V---2A)
- 16 Аудио вход

Зарядка

Внимание: полностью зарядите микрофон и колонку перед первым использованием, т.к. они могут быть разряжены.

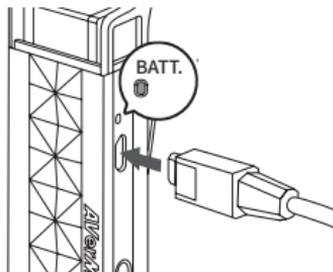


Диод батареи микрофона (BATT.)

Мигает красный: критический разряд

Мигающий оранжевый: низкий заряд

Мигает красный > Оранжевый > Зеленый:
заряжается

Горит зеленый: полностью заряжен

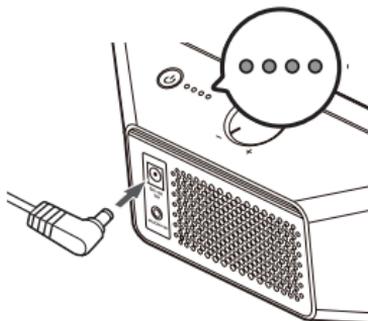

Диоды батареи колонки

☀️ ○ ○ ○ Мигает красный:
критический разряд


● ○ ○ ○ Горит зеленый: низкий заряд

● ● ☀️ ○ Мигает зеленым: заряжается

● ● ● ● Горит зеленый:
полностью заряжен


Подготовка

Проденьте ремешок на шею через хомутик. Затем прикрепите хомутик к микрофону.

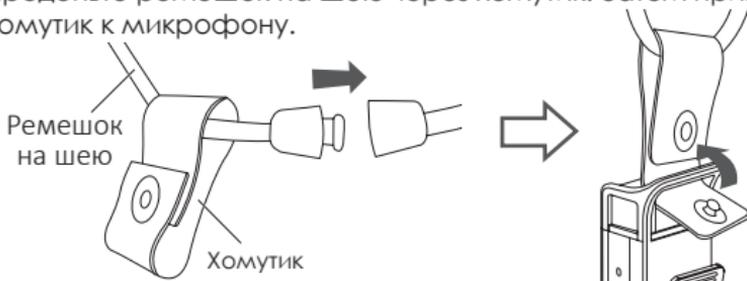


Эксплуатация

Вы можете прикрепить микрофон к одежде с помощью клипсы или повесить его на шнурок. Наиболее эффективное расстояние между ртом и микрофоном составляет 15 см.

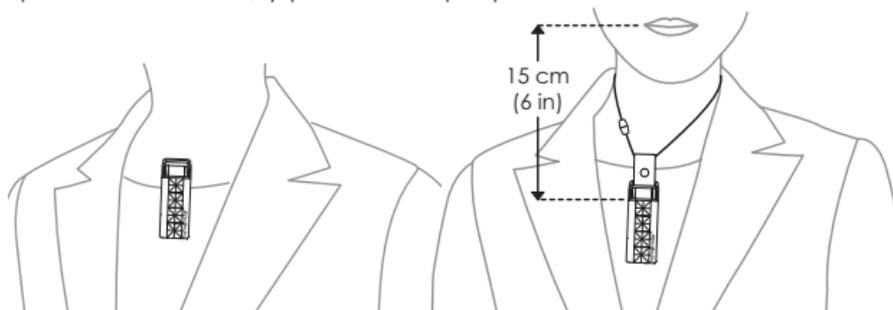


包裝內容

 請確認您購買的包裝盒內包含以下所有物品。




麥克風
(AW315T)

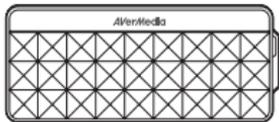

擴音器
(AW330S)



 快速安裝手冊



電源插頭



USB 電源線



3.5 mm 音源線



掛繩




掛繩釦



耳機麥克風


TC

外觀簡介

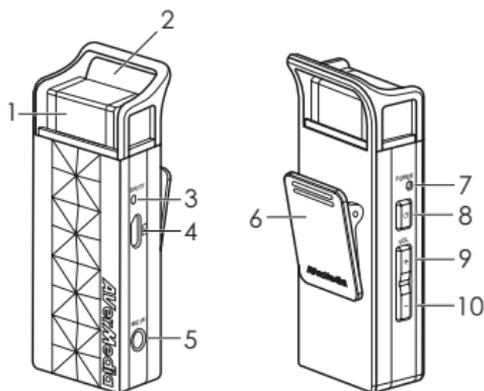

麥克風

- 1 麥克風
- 2 掛繩孔
- 3 電池指示燈
- 4 USB 電源插孔
- 5 麥克風輸入
- 6 背夾
- 7 電源指示燈
- 8 電源鍵
- 9 增大音量鍵
- 10 減小音量鍵

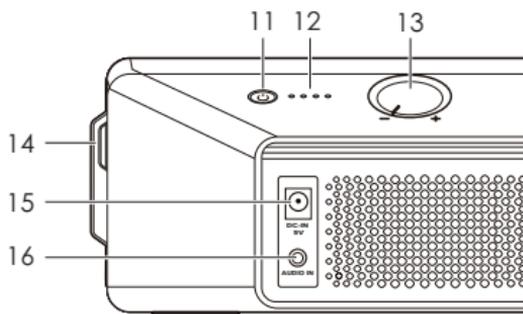

擴音器 (背面)


- 11 電源鍵 (LED)
- 12 電池指示燈
- 13 音量旋鈕



- 14 提帶孔
- 15 電源插孔 (輸入: 9V $\overline{\text{---}}$ 2A)
- 16 音源輸入

充電

注意: 第一次使用前請先將麥克風和擴音器充滿電，因裝置出廠時可能不會是滿電的狀態。

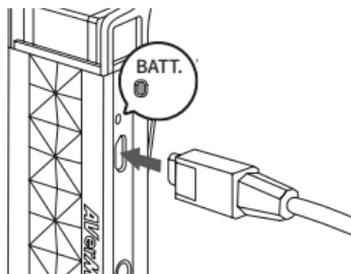


麥克風電池指示燈 (BATT.)

閃爍紅燈: 電量嚴重不足

閃爍橘燈: 低電量

閃爍紅燈 > 橘燈 > 綠燈: 充電中

恆亮綠燈: 充滿電

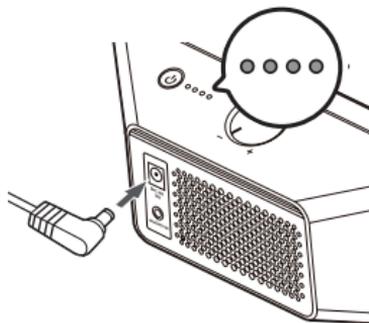

擴音器電池指示燈

☀️○○○ 閃爍紅燈: 電量嚴重不足

●○○○ 恆亮綠燈: 低電量


●●☀️○ 閃爍綠燈: 充電中

●●●● 恆亮綠燈: 充滿電

TC


準備

先將掛繩穿過掛繩釦，然後將掛繩釦扣上麥克風。

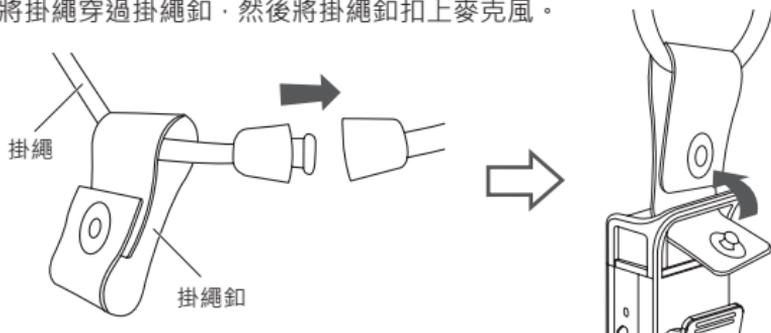


穿戴

您可使用背夾將麥克風夾於衣服上，或使用掛繩穿戴麥克風。麥克風最佳使用距離為 15 公分 (6 英寸) 以內。

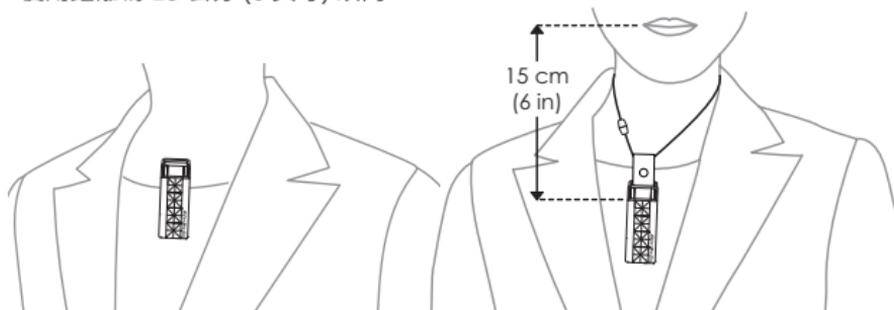


包装内容

 请确认您购买的包装盒内包含以下所有物品。




麦克风
(AW315T)

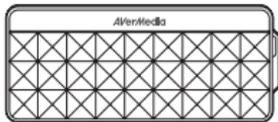

扬声器
(AW330S)



 快速安装手册



电源插头



USB 电源线




3.5 mm 音频线



挂绳




挂绳扣

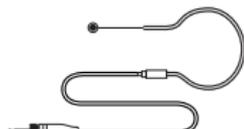

耳机麦克风


SC

外观简介

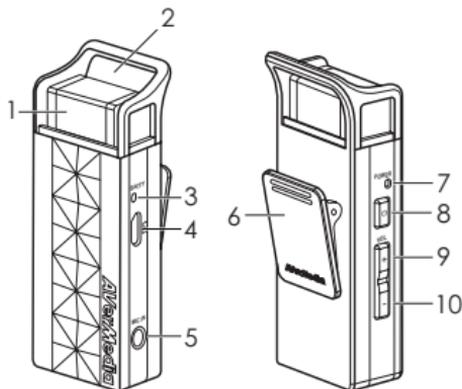


麦克风

- 1 麦克风
- 2 挂绳孔
- 3 电量指示灯
- 4 USB 电源插孔
- 5 麦克风输入
- 6 领夹
- 7 电源指示灯
- 8 电源键
- 9 增加音量键
- 10 减小音量键

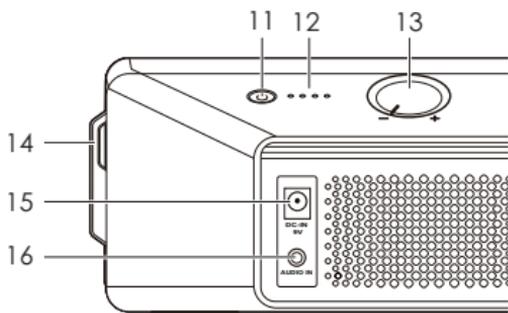

扬声器 (背面)


- 11 电源键 (LED)
- 12 电量指示灯
- 13 音量旋钮

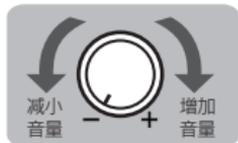

- 14 提带孔
- 15 电源插孔 (输入: 9V $\ddot{=}$ 2A)
- 16 音源输入

充电

注意: 第一次使用前请先将麦克风和扬声器充满电，因设备出厂时可能不会是满电的状态。

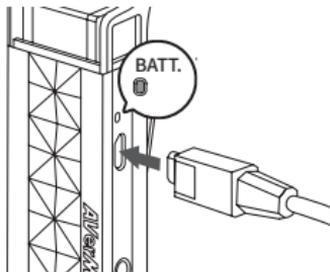


电池指示灯 (BATT.)

闪烁红灯: 电量严重不足

闪烁橘灯: 低电量

闪烁红灯 > 橘灯 > 绿灯: 充电中

恒亮绿灯: 充满电

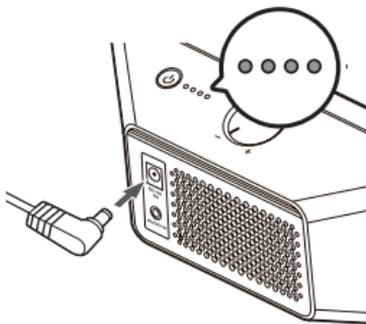

扬声器电池指示灯

☀️○○○ 闪烁红灯: 电量严重不足


●○○○ 恒亮绿灯: 低电量

●●☀️○ 闪烁绿灯: 充电中

●●●● 恒亮绿灯: 充满电


准备

先将挂绳穿过挂绳扣，然后将挂绳扣扣上麦克风。

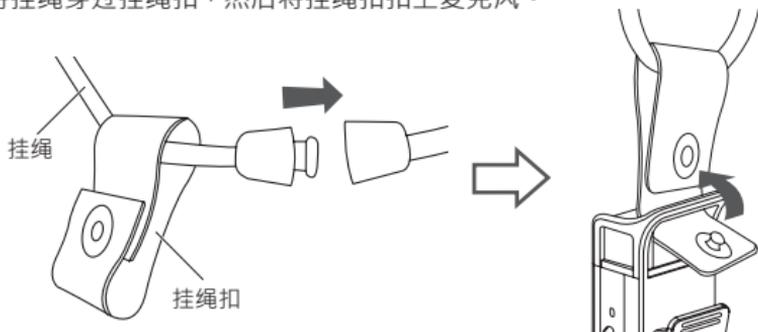

穿戴

您可使用背夹将麦克风夹于衣服上，或使用挂绳穿戴麦克风。麦克风最佳使用距离为 15 公分 (6 英寸) 以内。

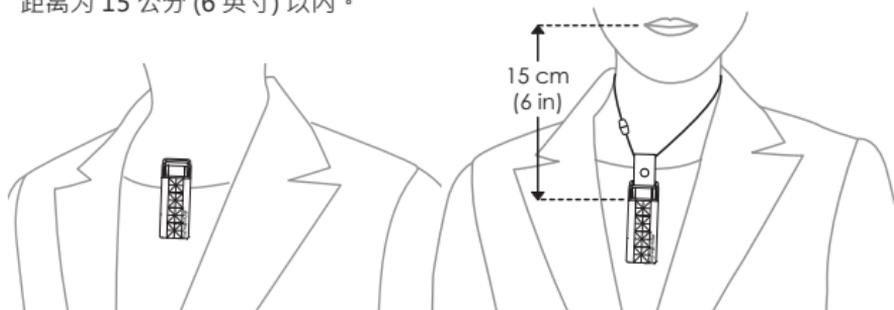


Installation Usage Notice

EN


For AW330 tutorial video, scan the QR code with your smartphone.




1. Connect the power adapter to the speaker.

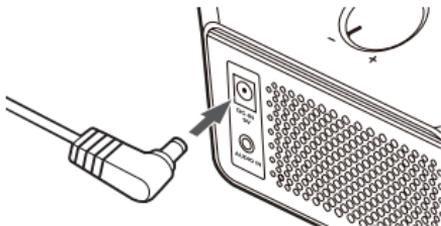


2. Press the power button and the LED will flash green.

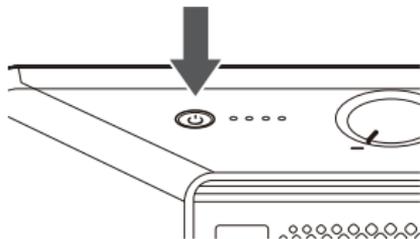


3. Wear the microphone around your neck and adjust it to a position around 15 centimeters (six inches) from your mouth.

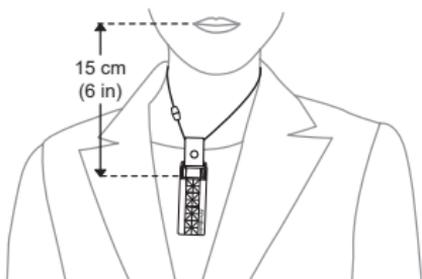


4. Press the microphone's power button. Your receiver and microphone are paired out of the box. If the pairing is interrupted, turn off the microphone and turn it on again. The microphone will automatically search and pair with the speaker. Simply wait for the POWER LED to turn solid green.

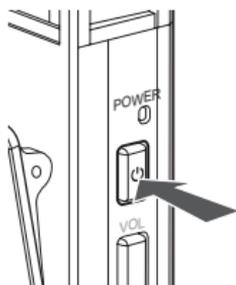

5. Use the volume control at the side of the microphone to adjust your volume. (Long-press "-" button to reach the minimum volume, and long-press "+" button to reach the maximum volume.)

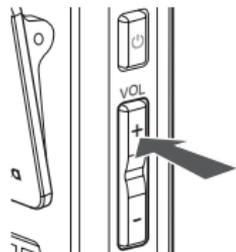

6. You can add a second audio source to the speaker. When you start talking into the microphone while music is playing in the background, AW330 automatically dims your music, so you can speak in a normal voice and your audience won't be distracted by the music. Once you stop talking, the music will return to its original volume.

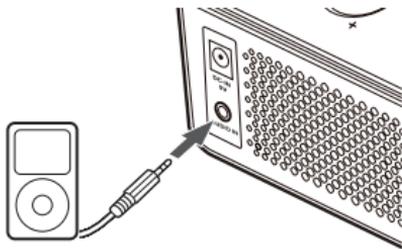

FAQ

How to avoid stuttering sound?

1. Do not hold and cover the bottom part of the microphone where the antenna is located.
2. Place the receiver away from metal objects, electrical or digital equipment, such as wireless router, metal cabinets, etc.
3. Place the speaker within 15 meters (49 feet) from the microphone and at least one meter (three feet) above the ground. Avoid obstructions which can weaken the signal.

How to adjust the microphone and speaker volume to achieve the best sound?

1. When howling occurs:
 - (a) Turn down the speaker volume or microphone volume.
 - (b) Avoid standing in front of the speakers or facing the microphone to the speakers.
2. When noises occur:

AW330 uses a high-sensitivity transmitting technology in order to achieve long-range transmission. If noises or unclear sounds occur, your environmental sound may be too loud. Excessive sound in the background can be unwantedly captured by your microphone, and outputted through speakers causing noises. It is advised that you lower the microphone's volume first and adjust the speaker to a moderate level.


安裝與注意事項

如欲參考操作影片，請使用手機掃描
右方 QR 碼。




TC


1. 將擴音器接上電源線。

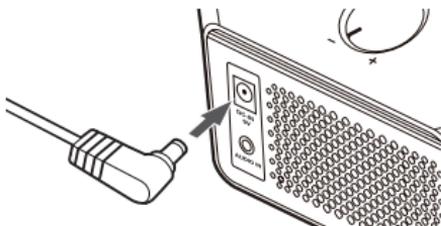


2. 按下擴音器開關，此時顯示綠燈閃爍。

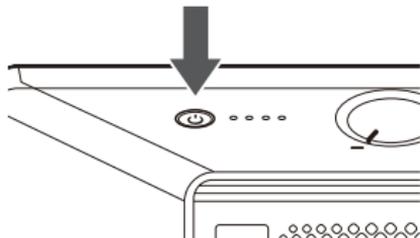


3. 將麥克風配掛在身上，調整至合適的配戴距離約 15 公分。

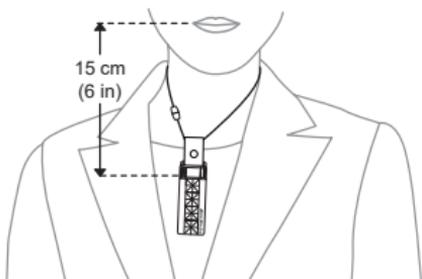


4. 按下麥克風開關。出廠前已預先配對，開機即可直接使用。若配對中斷請關閉麥克風電源再重新開啟，麥克風會自動搜尋可配對的擴音器，待「POWER」燈綠燈恆亮即完成配對。

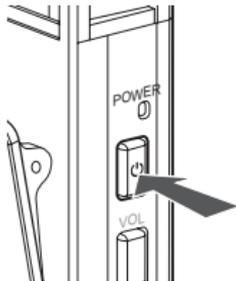

5. 使用中若有調整音量需求，可由麥克風側邊音量調整按鈕進行調整 (長按「-」可達最小音量，長按「+」可達最大音量)。

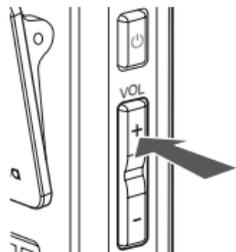

6. 您可同時外接第二音源到擴音器。當麥克風與外接音源同時使用時，擴音器會自動將背景音樂音量降低。發話者不需特意拉高音量來壓過音樂聲音，同時也能讓聽眾在不受音樂干擾下更清晰接收到發話者所傳達的內容！當不需使用麥克風時，擴音器將會自動恢復正常音量！

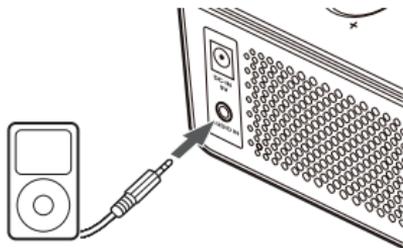

FAQ

如何避免斷音情形發生？

1. 由於麥克風天線位於麥克風本體下方，建議勿以手握遮蔽天線位置。
2. 接收器擺放位置請遠離金屬物、電器或數位設備 (如無線分享器、金屬櫃等)。
3. 麥克風與擴音器擺放位置直線距離建議在 15 公尺內，離地面至少 1 公尺以上，請盡量不要有阻隔物，避免造成訊號強度減弱而導致斷音。

如何調整麥克風與擴音器的音量以達到最佳音效？

1. 當嚎音 (howling) 發生時:
 - (a) 將擴音器音量調低或將麥克風音量調低。
 - (b) 避免近距離讓麥克風與擴音器正面相對。
2. 當出現雜音時:

為了達到長距離收音，AW330 採用高感度收音技術。若您在使用過程中出現雜音或音質不清的現象，可能是您的背景環境音過大而被麥克風收音後回放擴大，建議您先試著將麥克風音量調低，再調整擴音器至適中的音量。

Radiation Exposure Statement for AW315T:

This equipment complies with the FCC portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.



European Community Compliance Statement

Class B

This product is herewith confirmed to comply with the requirements set out in the Council Directives on the approximation of the laws of the Member States relating to RED 2014/53/EU, Low Voltage Directive (LVD) 2014/35/EU, (EMC) 2014/30/EU and Energy-related Products Directive (ErP) 2009 / 125 / EC.



Waste Electrical and Electronic Equipment

The mark of crossed-out wheeled bin indicates that this product must not be disposed of with your other household waste. Instead, you need to dispose of the waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. For more information about where to drop off your waste equipment for recycling, please contact your household waste disposal service or the shop where you purchased the product.



台灣NCC

「取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。」



Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement for AW330S:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.



R33183
RoHS

BSMI Registration of Product Certification (Taiwan)

限用物質及其化學符號						
設備名稱：擴音器，型號：AW330S						
單元	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr ⁶⁺)	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
電路板及零組件(電子料或電機料…等)	—	○	○	○	○	○
塑膠組件(外殼或泡棉…等)	○	○	○	○	○	○
金屬組件(金屬殼或螺絲…等)	—	○	○	○	○	○
配件(電源供應器或電纜線…等)	—	○	○	○	○	○
紙製品及包裝件(紙盒或手冊…等)	○	○	○	○	○	○
備考 1. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。						
備考 2. “—” 係指該項限用物質為排除項目。						

限用物質及其化學符號						
設備名稱：無線麥克風，型號：AW315T						
單元	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr ⁶⁺)	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
電路板及零組件(電子料或電機料…等)	—	○	○	○	○	○
塑膠組件(外殼或泡棉…等)	○	○	○	○	○	○
金屬組件(金屬殼或螺絲…等)	—	○	○	○	○	○
紙製品(貼紙…等)	○	○	○	○	○	○
備考 1. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。						
備考 2. “—” 係指該項限用物質為排除項目。						

China RoHS 中华人民共和国产品信息

• 产品标志说明



环保使用期限标志是根据《电子电气产品有害物质限制使用管理办法》以及SJ/T 11364《电子电气产品有害物质限制使用标识要求》制定的，适用于中国境内销售的电子电气产品的标识。环保使用期限表示电子电气产品中含有的有害物质在正常使用条件下，不会发生外泄或突变。电子电气产品用户使用该产品不会对环境污染或污染对其人身、财产造成严重的损害。电子电气产品的生产日期即为产品环保使用期限的起始日期。标识电子电气产品有害物质限制使用标志的产品表示其可以回收利用。另外，此期限不同于质量/功能的保证期限。

• 产品中有毒物质的名称及含量表

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电路板组件*	X	○	○	○	○	○
塑料外壳	○	○	○	○	○	○
金属组件	X	○	○	○	○	○
电缆	X	○	○	○	○	○
电源适配器	X	○	○	○	○	○
遥控器	X	○	○	○	○	○
其它	X	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。

○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572《电子电气产品中有害物质限量要求》标准规定的限量要求以下。

X：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572《电子电气产品中有害物质限量要求》标准规定的限量要求，但符合欧盟RoHS指令的豁免条款及电池指令的要求。

*电路板组件包括印刷电路板及其构成的零部件，如电阻、电容、集成电路、连接器等。

• 制造日期

所有AVerMedia产品制造日期已编入产品序列号。如需获知产品制造日期，请联系当地销售办事处。

• 包装回收标志

电子电气产品的包装根据GB/T 18455《包装回收标志》标准规定的回收利用及再生的要求进行标识。无法在包装上标识回收标志时，可以使用以下包装标志。



瓦楞纸板 -
外箱、内箱、产品主体包装



瓦楞、纤维纸板 -
小盒及其他纸板



纸 -
说明书、网页及其他纸材



聚酯 -
捆扎带



高密度聚乙烯 -
塑料袋、EPE内盒、气泡袋、夹链袋



其他 -
依据其他材质的代码标示

AW330 Audio System: Smart Microphone (AW315T) + Speaker (AW330S)
AW330 擴音系統: 無線麥克風 (AW315T) + 擴音器 (AW330S)
AW330 擴音系統: 麥克風 (AW315T) + 揚聲器 (AW330S)



Model No.: AW330
MADE IN CHINA

www.avermedia.com