


Mounting Template

Plantilla de Montaje

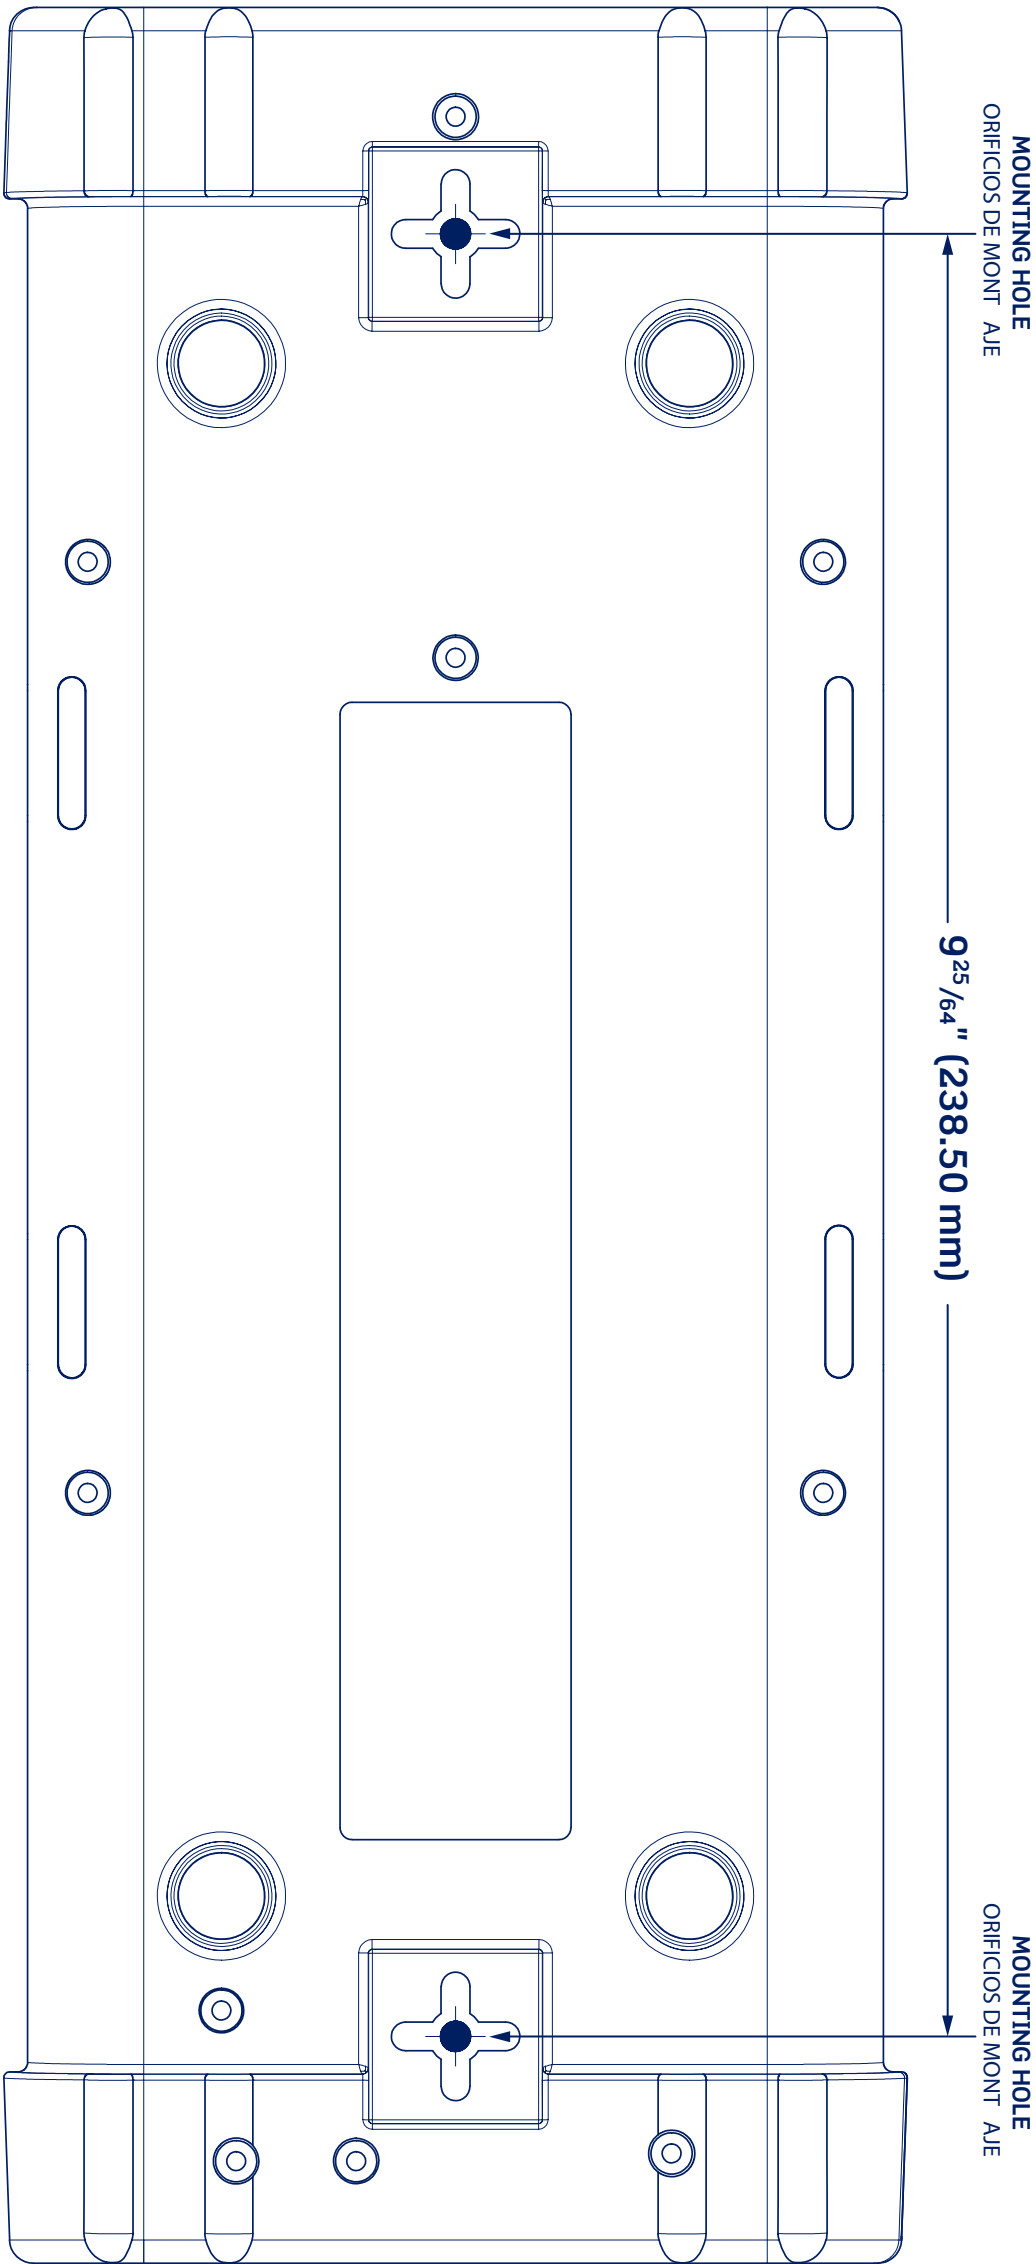

STEPS TO MOUNT SURGE PROTECTION STRIP

1. Cut out template and mark the center of mounting holes on wall.
2. Screw in a #6 round or pan head screw of the appropriate length into wall.
3. Leave approx. 1/8"-1/4" (.32-.64 cm) of screw head protruding from wall.
4. Line-up Surge Protector mounting holes on screws and slide to side or to bottom.
5. Adjust screws if necessary.

PASOS PARA MONTAR TIRA DE PROTECCION CONTRA SOBRETENSIONES

1. Recorte de plantilla y marque el centro de los agujeros de montaje en la pared.
2. Coloque el tornillo redondo # 6 o la cabeza plana del tornillo del tamaño apropiado en la pared.
3. Deje que sobresalga de la pared .32 -.64 cm (1/8 "-1/4" .) aproximadamente de la cabeza del tornillo.
4. Alinee los agujeros de montaje del protector de sobretensión en los tornillos y deslícelos hacia el lado o hacia abajo.
5. Ajuste los tornillos si es necesario.