

Nylon Button Head Anchors with Pins




Installation Instructions

711•711TP•714•714TP


*Not Recommended for use in overhead applications

Installation Guidelines

Using the proper diameter bit, drill a hole into the base material to a depth of at least 1/4" deeper than the required embedment. The tolerances of the drill bit used should meet the requirements of ANSI Standard B212.15. Blow the hole clean of dust and other material.

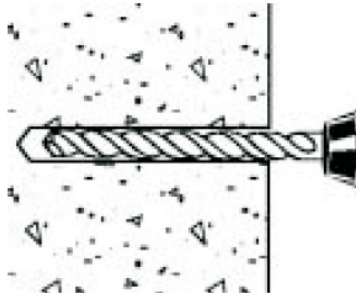

Insert the anchor through the fixture. Drive the nail into the anchor body to expand it. Be sure the head is seated firmly against the fixture and that the anchor is at

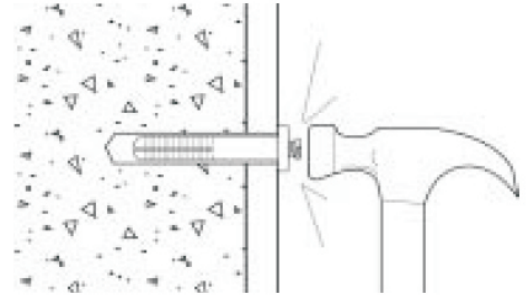

the proper embedment. This anchor is not recommended for use overhead.