

Countertop Box Kits with Round Plastic Box & Metal Trapdoor Cover

Non-metallic box. Round metal cover.

Kits are available with a choice of three installed, UL-listed receptacles: tamper-resistant (TR), tamper resistant (TR) GFCI, or combo receptacle with TR and two USB ports.

FEATURES AND BENEFITS

- Round trapdoor cover hides miscut openings and closes flush with countertop
- Easy, secure installation—spring clip holds box securely against the surface when screws are tightened
- Fits granite or other countertop material up to 1-1/2" thick
- Easy 'No Glue' installation
- Complies with NEC section 406.5 (E) for use in countertops or similar work surfaces

CATALOG NUMBER	UPC/DCI/NAED MFG #018997	DESCRIPTION	UNIT/STD PKG	DIM A	DIM B	DIM C	DIM D
FLBT6520MB	22112	Non-metallic box with installed 20A TR receptacle, Round brass trapdoor cover	1	5.887	2.219	3.500	6.001
FLBT6520NL	22113	Non-metallic box with installed 20A TR receptacle, Round nickel-plated trapdoor cover	1	5.887	2.219	3.500	6.001
FLBT6520GMB	22110	Non-metallic box with installed 20A TR GFCI receptacle, Round brass trapdoor cover	1	5.887	2.219	3.500	6.001
FLBT6520GNL	22111	Non-metallic box with installed 20A TR GFCI receptacle, Round nickel-plated trapdoor cover	1	5.887	2.219	3.500	6.001
FLBT6520UMB	22056	Non-metallic box with installed 20A TR receptacle with 2 USB ports, Round brass trapdoor cover	1	5.887	2.219	3.500	6.001
FLBT6520UNL	22057	Non-metallic box with installed 20A TR receptacle with 2 USB ports, Round nickel-plated trapdoor cover	1	5.887	2.219	3.500	6.001

PATENTED.



INSTALLATION INSTRUCTIONS



1 Determine box location. Cut a 5" diameter opening in countertop. Insert box, bending the clip as necessary to go through opening.



2 Secure box to countertop by tightening two #10 screws inside box...



3 (underside of counter)...drawing the box securely against the underside of the counter. NO GLUING!




4 Wire receptacle in accordance with National, State, and local codes.



5 Install trapdoor coverplate to box using the two #6-32 screws provided. *Note: Round cover hides miscut openings.*



6 Rotate box/cover assembly into position, lining it up parallel with the countertop and backsplash.

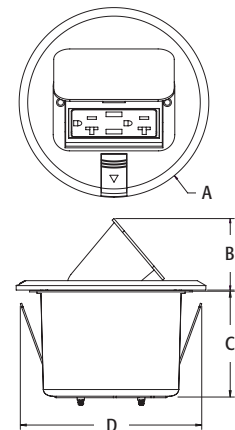

Scan For Video

