


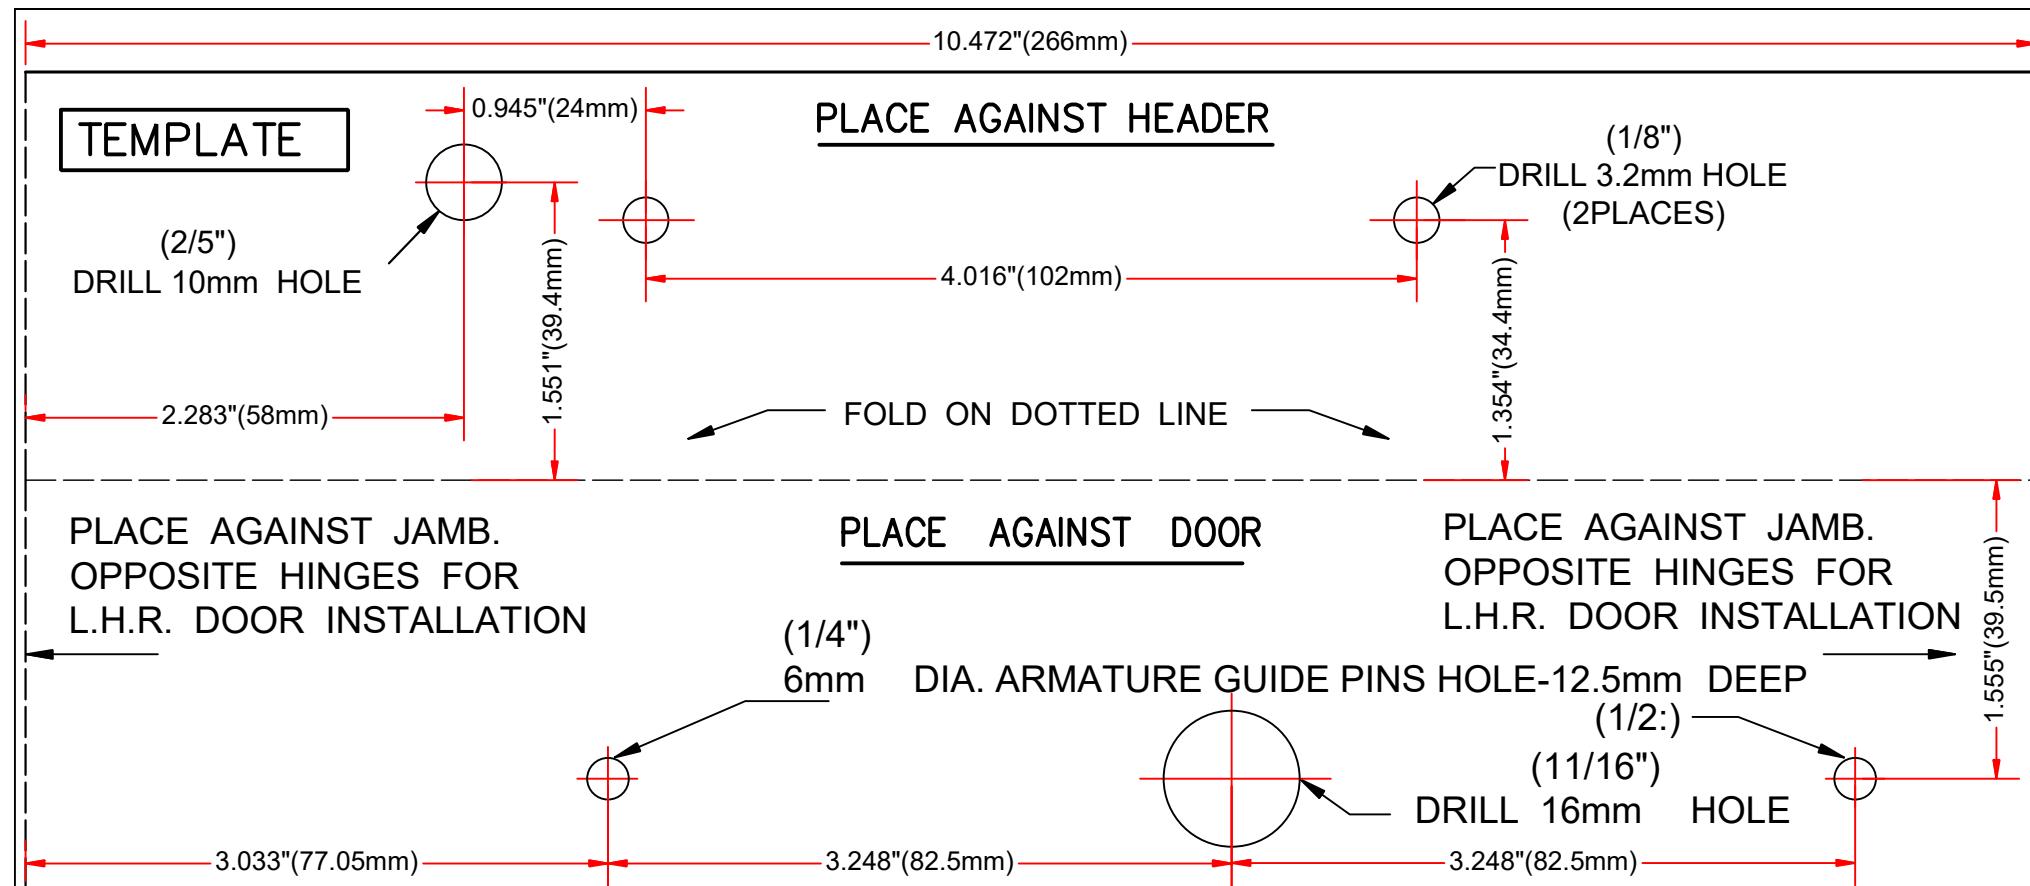

MOUNTING INSTRUCTION

STEP1

- * FOLD TEMPLATE ALONG DOTTED LINE.
- * PLACE TEMPLATE AGAINST DOOR AND HEAD FRAME.
- * DRILL HOLES AS INDICATED ON TEMPLATE.

STEP2

- * MOUNT THE ARMATURE PLACE TO THE DOOR USING 1 RUBBER WASHER SANDWICHED BETWEEN 2 STEEL WASHERS (THE RUBBER WASHER AND 2 STEEL WASHERS ARE INSTALLED ON THE THROUGH SEX NUT BETWEEN THE ARMATURE PLACE AND DOOR).

STEP3

- * DETACH MOUNTING PLATE TO DOOR USING 2 SOCKET CAP SCREWS. SCREWS COULD BE ACCESSED THROUGH BOTTOM OF MAGNET.
- * INSTALL THE MOUNTING PLACE WITH 2 FLAT HEAD SCREWS (THE 2 M5*15 FLAT HEAD SCREWS ARE INSTALLED IN THE SLOTTED HOLES FOR ADJUSTMENT)
- * ADJUST MOUNTING PLATE SO THAT IT AND THE ARMATURE PLACE FORM A RIGHT ANGLE
- * USING THE MOUNTING PLACE AS A TEMPLATE DRILL THE WIRE HOLE
- * DRILL AND INSTALL THE REMAINING MOUNTING SCREWS

STEP4

- * INSTALL MAGNET TO MOUNTING PLACE WITH 2 M6 SCREWS SUPPLIED.

STEP5

- * INSTALL ELECTRICAL WIRING PER INSTRUCTION SHEET.

STEP6

- * TEST ALL FUNCTIONS OF THIS MODEL (SEE WIRING INSTRUCTION).

STEP7

- * INSERT 2 LOCKING STOPPER IN TWO END PLATES, AND COVER WITH 4mm SCREWS.

STEP8

- * INSERT 2 ALUMINUM CAPS ON TWO SIDE M6 SCREW HOLES.