


LDTR Caster Installation

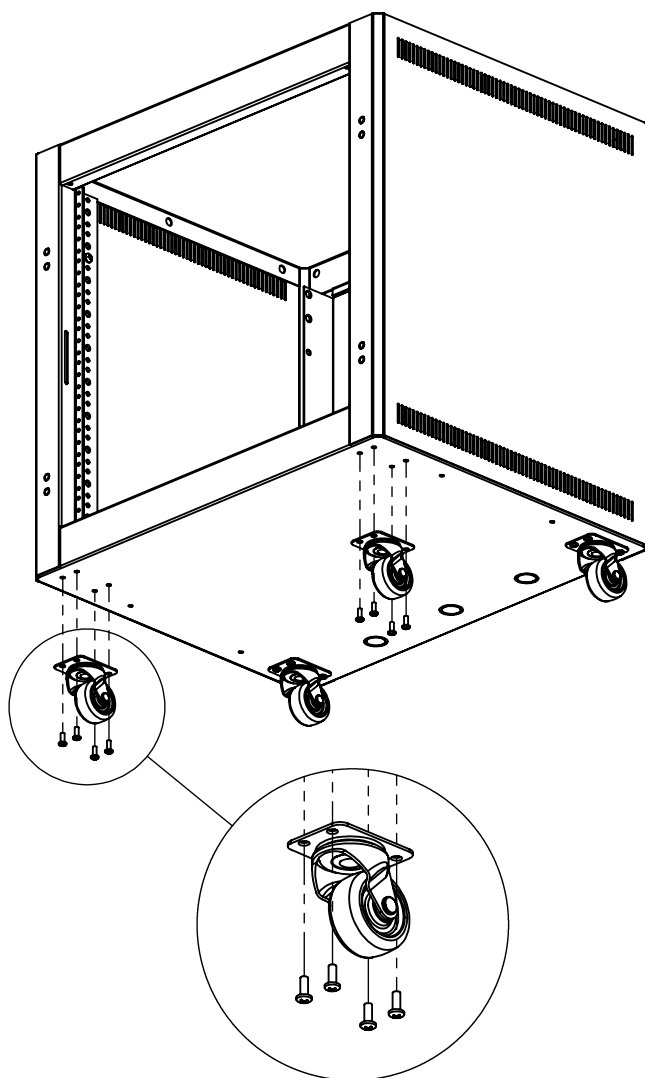

Align the holes in the casters with the matching holes in the bottom of the cabinet.

Insert an 10-32 pan head screw through the caster and into the bottom of the cabinet.

Secure each screw with an 10-32 keps nut.

P/N: 17992

Hardware:

- 4 2.5" casters (P/N: 18780)
- 16 10-32 x 1/2" pan hd. screws (P/N: 3866)
- 16 10-32 keps nuts (P/N: 4045)