

resideo



**V-Plex<sup>®</sup> Serialized Interface Module (SIM)**

**ADEMCO 4193SNP**

For connecting alarm sensing devices and switches to  
ADEMCO V-Plex Polling Loop systems

**Quantity: 1 ea.**

Requires control panel with SERIAL NUMBER device capability  
(e.g., Vista-50P, Vista-128BP, Vista-250FBPT)



SECURITY  
SIGNALING



LISTED



N7644-3V2C 3/15 Rev. C


## Installation Instructions

The 4193SNP is a serialized two-zone expander used to connect alarm sensing devices to controls that support V-Plex polling loop devices (i.e., Vista-128BP and Vista-250FBP). The ADEMCO 4193SNP can be configured as one supervised zone (10K EOLR) and one unsupervised zone (normally closed devices only).

**Consult the control panel installation instructions for programming information.**

**Specifications:**

- Physical:** 2-1/2"W x 1/2"H x 1/2"D
- Weight:** 0.7 ounces (19.9 grams)
- Voltage:** 8-12VDC (supplied from the Honeywell Security Control Panel, V-Plex polling loop).
- Input Current:** 1.7mA
- Operating Temperature:** 32°F to 120°F (0°C to 49°C)
- Max. Relative Humidity:** 93%
- Max. Zone Line Impedance:** 300 ohms
- Max. V-Plex® Polling Loop Impedance:** 20 ohms

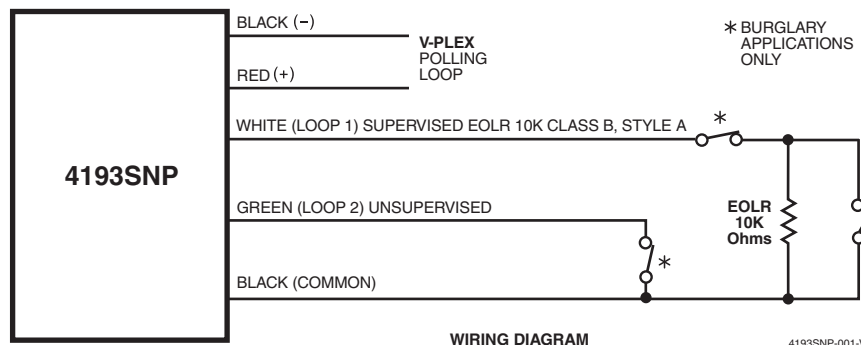

**For Fire Applications:**

For Fire Alarm applications, only Loop 1 can be used. The 4193SNP must be mounted inside the control panel or inside a UL-listed junction box. Use Honeywell End-Of-Line resistor model number EOL100, 10K ohms, on Loop 1. This module can be used with four wire Smoke detectors, Heat detectors and Pull stations. Loop 2 cannot be used in a fire application. The V-Plex® Polling loop is Class B, Style 3. Install per NFPA-72.

**For UL Burglary Applications:**

For commercial burglar alarm applications, Loop 1 must be used. For Household applications, Loop 2 zone of the 4193SNP may be used in an unsupervised configuration only when the unit is mounted within 3 ft of the alarm initiating device, with no intervening barriers.

**Notes:**

1. All circuits are power-limited.
2. For dry indoor use only.
3. Do not install in air-handling spaces.
4. Loop 2 cannot be used without Loop 1.



QTY 1

Country of Origin: Mexico



7 81410 98669 5



4193SNP