

Switch Settings (defaults shown)

VIEW B

All models are shipped with jumper across RS2 terminals for use with one reed switch. If using second reed switch, remove jumper wire and insert second reed switch.

SWITCH SETTINGS	1	2	3	4	5	6	7	8
Arming - immediate	OFF*							
Arming - 15 second delay	ON							
Trip - immediate		OFF*						
Trip - 15 second delay		ON						
Shut-off based on duration (switches 4 & 5)			OFF*					
Shut-off approx. 3 sec. after door closes			ON					
Duration - 30 second alarm				OFF*	OFF*			
Duration - 180 second alarm				OFF	ON			
Duration - continuous alarm				ON	OFF			
Duration - annunciator mode				ON	ON			
Low battery detection on - Turn switch off						OFF*		
Low battery detection off - Turn switch on						ON		
Volume - high							ON*	
Volume - low							OFF	
Relay function → OFF								OFF*
Relay function → ON								ON

*factory settings

Slide lever to desired ON/OFF position as labeled on circuit board.

NOTE: Disconnect all power sources before changing switch settings.

INSTALLATION OF CABINET


1. Insert the (4) mounting tabs fully into back box mounting tab slots, use rubber mallet if necessary.
2. Select location, place cabinet in closed position, against the wall, mark holes. Remove cabinet.
3. Drill (4) 1/4 in. diameter holes. Insert the (4) #10-12 wall anchors.
4. Place cabinet in position. Install the (4) #10 x 1 1/2 in. screws.

INSTALLATION OF ALARM ASSEMBLY

1. Center alarm mounting plate on top of cabinet. Select at least two of the four mounting holes. Mark and drill 3/16 in. holes and install the #8-10 wall anchors.
2. Fish switch wires through the alarm mounting plate and siren mounting plate (View A). Install two alarm mounting screws into the previous installed anchors.
3. Connect the two magnetic switch wires following the terminal switch diagram (View B).
4. Select switch settings. Connect 9 volt battery. Test.
5. Attach the alarm cover using the tamperproof screw and tool provided.

INSTALLATION OF SHELF

1. Align wire shelf to bottom mounting posts inside the cabinet.
2. Insert (2) #8-32 x 1/2 in. machine screw, through #8 washer, into mounting post and tighten.

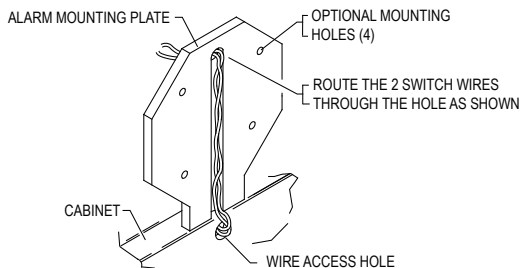

VIEW A

WARNING: This product can expose you to chemicals including Dichloromethane, which is known to the State of California to cause cancer, and Bisphenol A (BPA), which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Three year warranty or a one year limited warranty (from date of purchase) on most products. See website for details. Electronic warranty form at www.sti-usa.com/wc14.

STI-7533 & STI-7533MED CABINET WITH ALARM AND WIRE SHELF

All specifications and information shown were current as of publication and are subject to change without notice.

7533MED JAN2024

